13845

DIY handmade goods

Be enduring as
the universe



NOTICE OF ASSEMBLE

Bring your own tools



Scissors:
Can be used to cut printed paper, cloth, etc.



Screw Driver:
For fixing screws,mostly canbe used to install doors and music components.



Tweezers:
For holding small materials and rolling up iron wire.



Cutter kinfe:
For peeling off power wire skin and cutting off materials.



Ruler:
For measuring materials to identify the number of materials so as to enhance work efficiency.

Warnings

- The product is not suitable for children under 14 years old. The should be under custody of adults when playing with the product.
- There are small parts, please do not swallow them for avoiding dangerous accidents.
- Please also play attention to the sharp-pointed materials to avoid injuries.

Making tips

1. LED wiring indication:
White=Positive;Grey=Negative.
2.Use a craft blade to carefully skim over the plastic to bare the copper wire.
3. For LED wiring extension, please refer to the below steps:

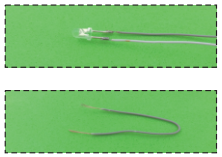

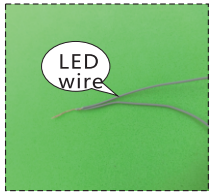

Twist the copper of both LED wire and extension wire together.

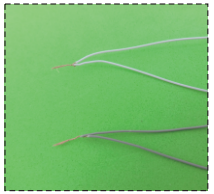

Do the same on the white wire.
Remarks: Tie a knot at the end of the grey wire to differentiate the polarity.

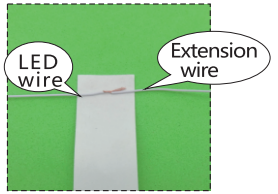

Place the duly twist wire on the tapes provided.

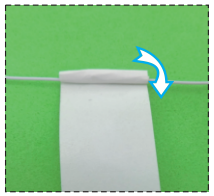

Roll and wrap the wire.

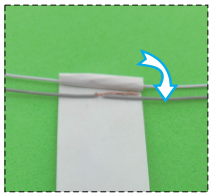

Place another wire next to it.
Remarks: DO NOT contact both copper wire to avoid short circuit.

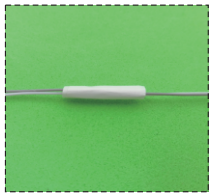

Roll and wrap it together.

Tips for assembling

1.Picures shown on the package may be slightly different from the actual product.
2.Please use the provided tracing paper for cutting purpose to achieve the best outcome.
3.Product designs and specification may be subject to change without advance notice for purpose of making improvement.
4.Testing on LED function:

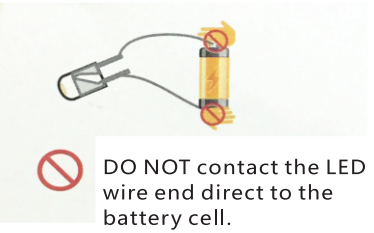

DO NOT contact the LED wire end direct to the battery cell.

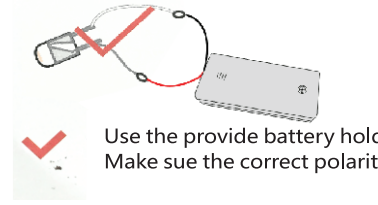

Use the provide battery holder. Make sue the correct polarity.

How to assemble the battery holder



1.Material and tools needed:
- Battery holder, LED bulb, tape, screw driver and 2 piece AA size battery(not provided)



2. Use screw driver and take the lid off from the battery holder.



3. Insert the battery take notes on the polarity.

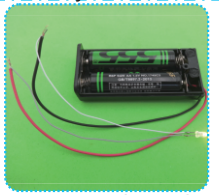

4. Connect the red wire to grey wire. Connect the black wire to white wire.



5.Wrap the exposed wire with the tapes.

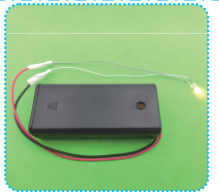

6. Place the box lid and fastness with screw driver.

Product information





Dining Table

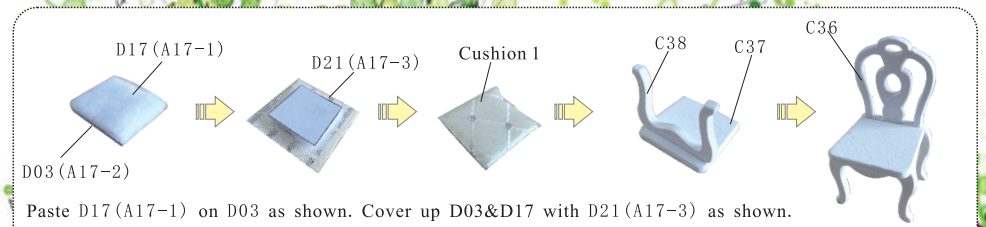

Paste D17(A17-1) on D03 as shown. Cover up D03&D17 with D21(A17-3) as shown.

(Note: The mean D17(A17-1) is cutting out D17 according to the template of A17-1;other material are same mean.)



(Note: The mean D47:5.5cm is cutting D47 with 5.5cm ;other material are same mean.)

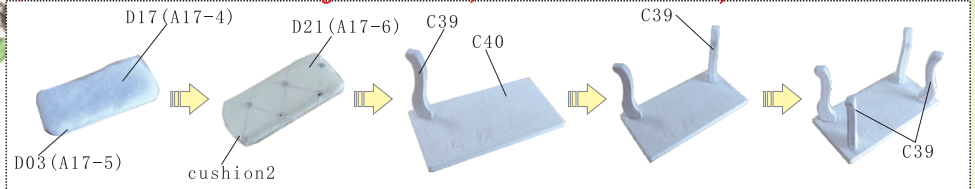

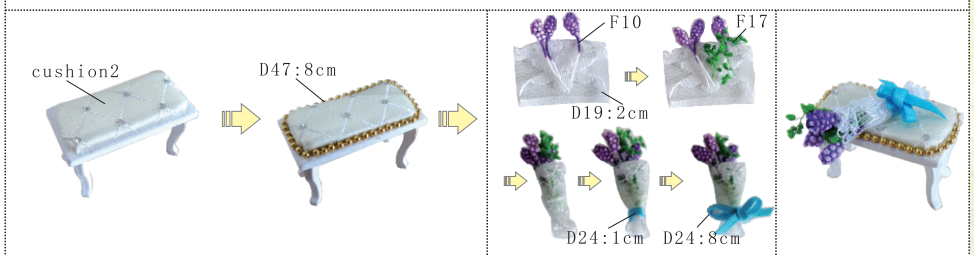

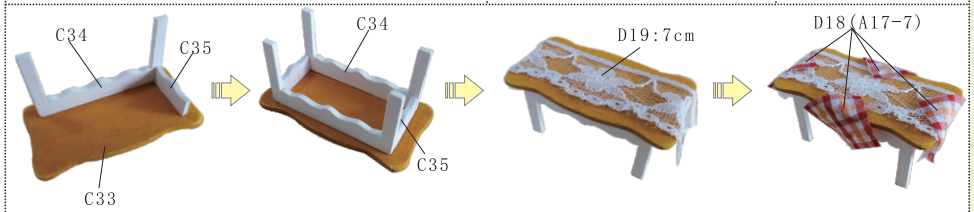

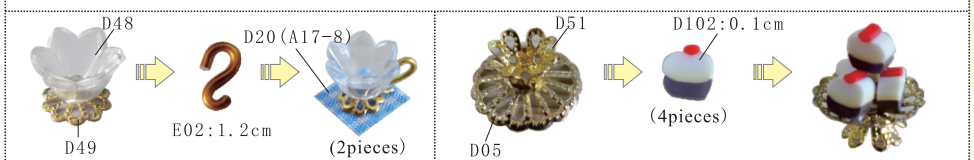



Dining Table

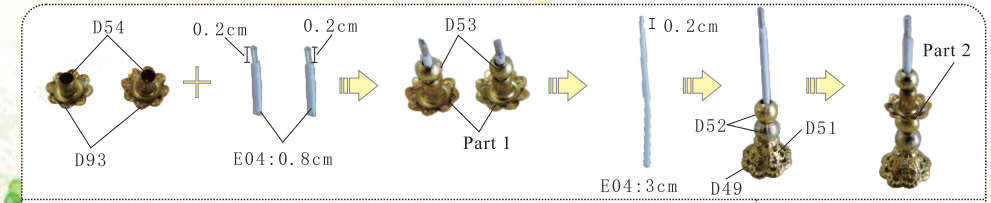

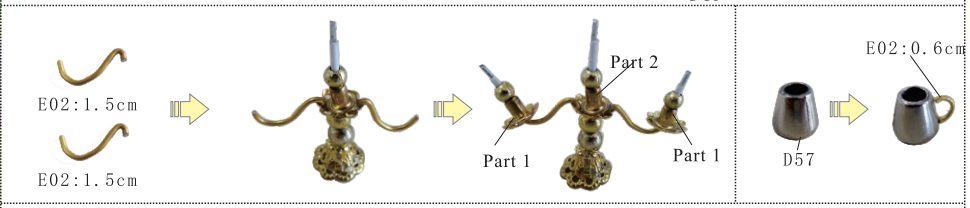

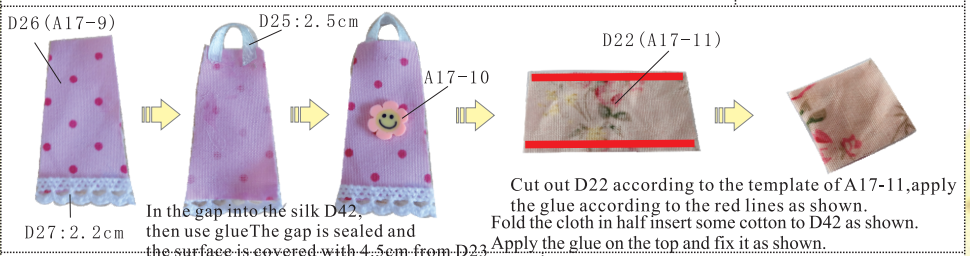

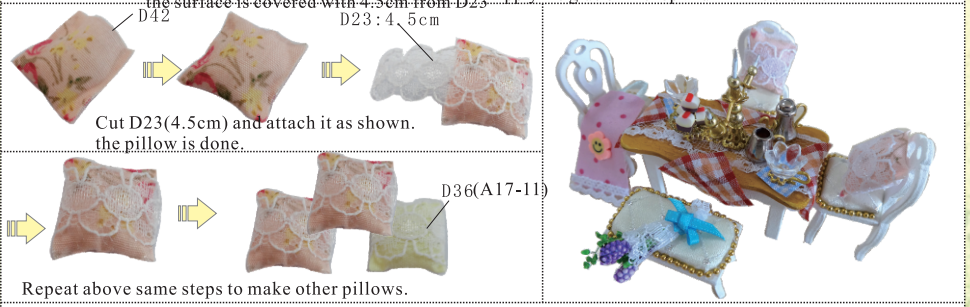

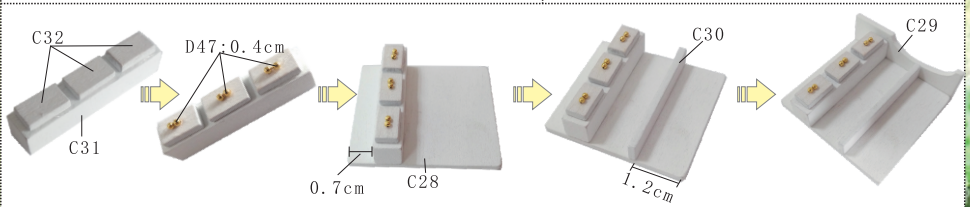

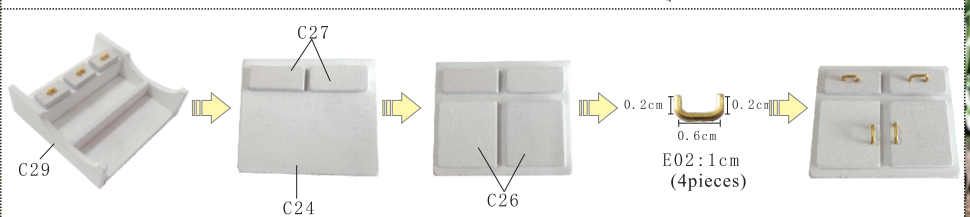

Cabinet

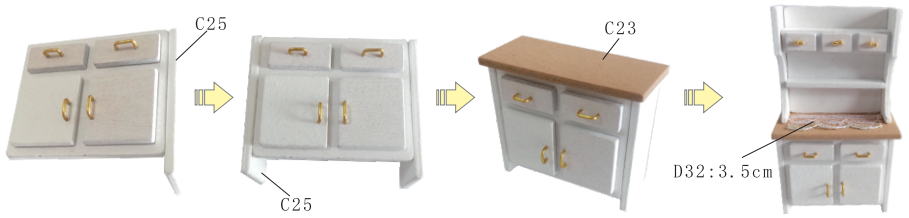

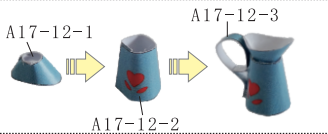

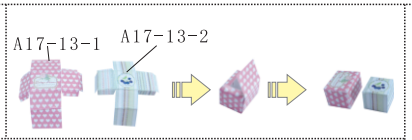



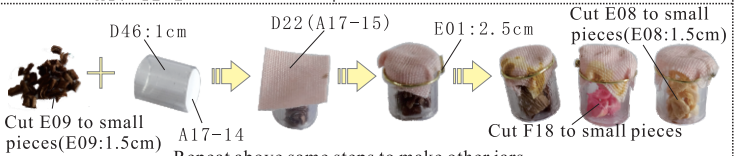

Repeat above same steps to make other jars.



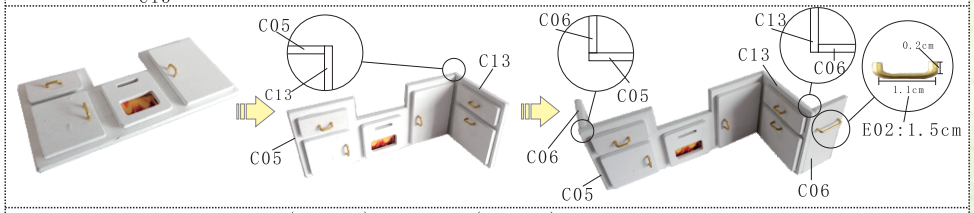

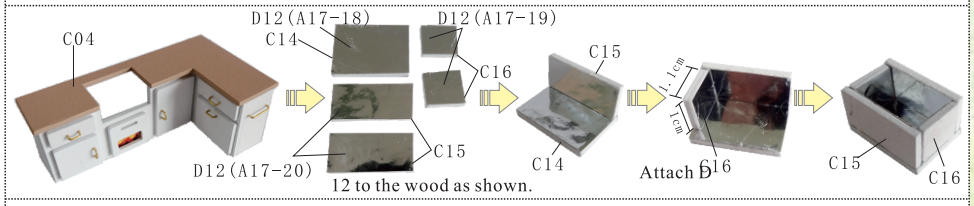

12 to the wood as shown.

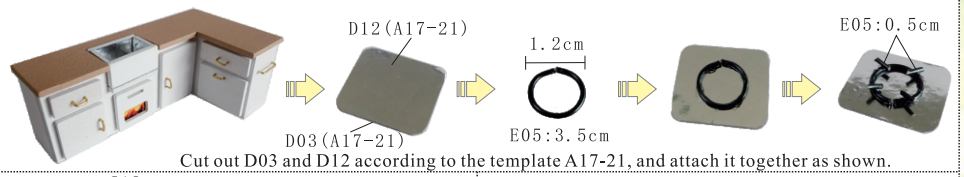

Cut out D03 and D12 according to the template A17-21, and attach it together as shown.

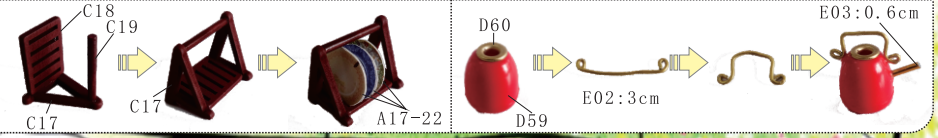

Cabinet

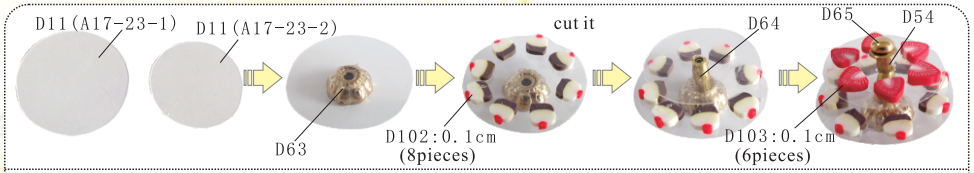

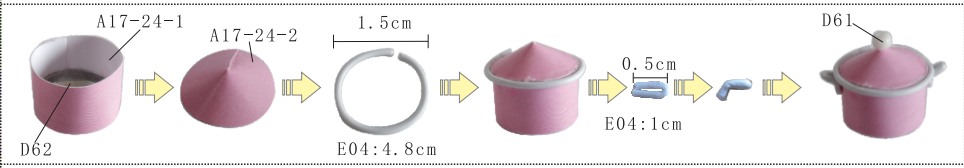

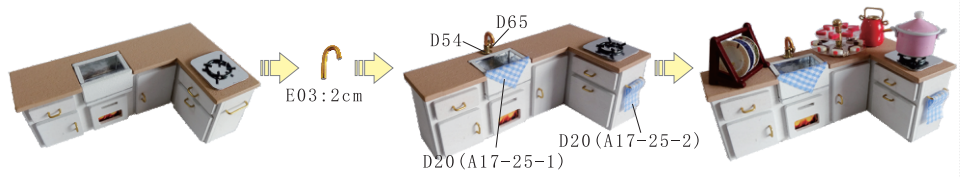

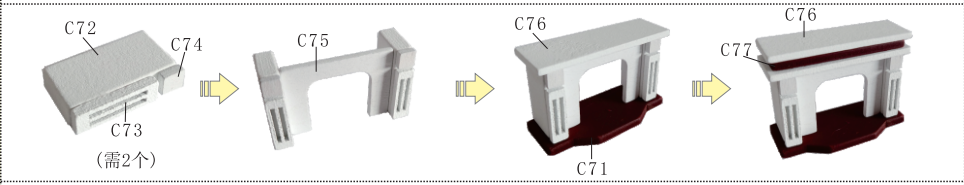

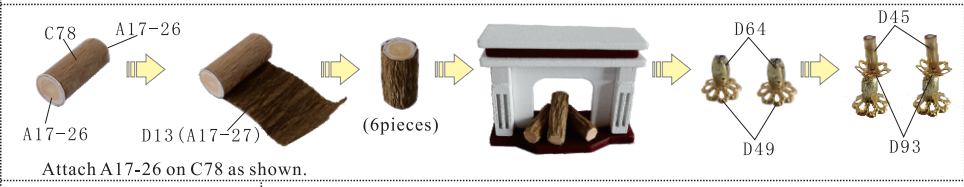

Attach A17-26 on C78 as shown.

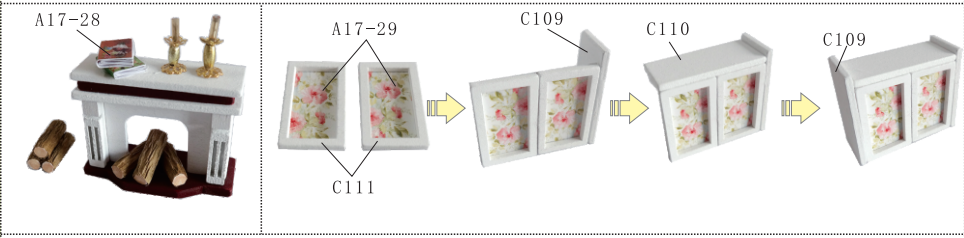

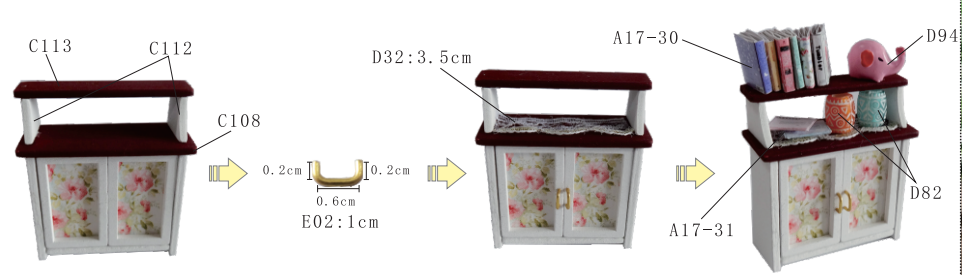

Coffee table

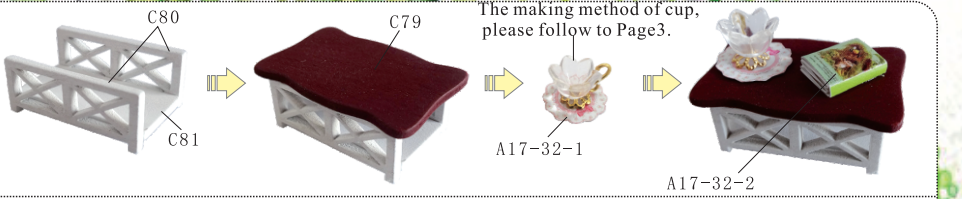

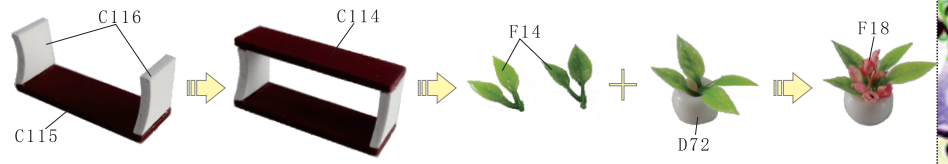

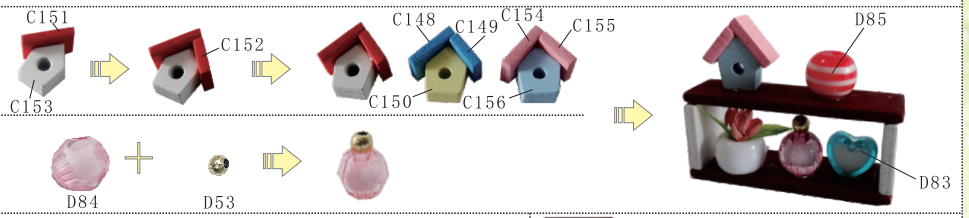

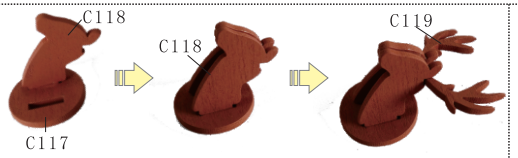

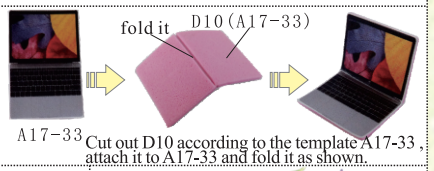

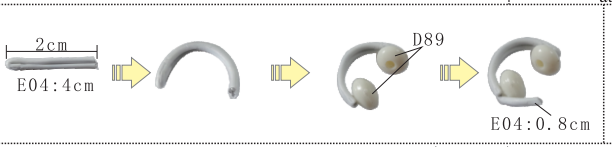

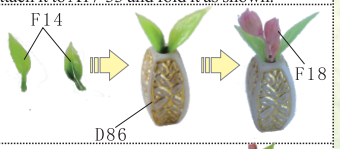

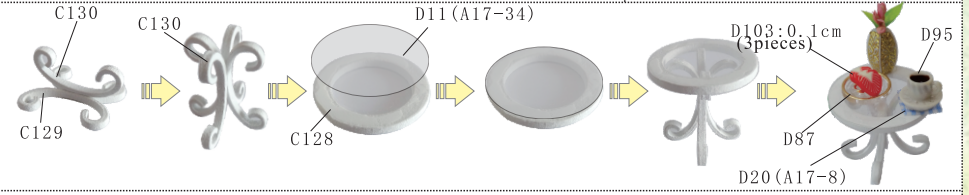

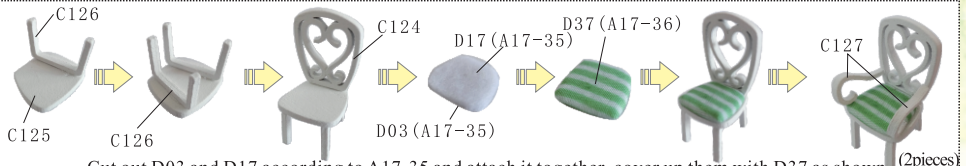

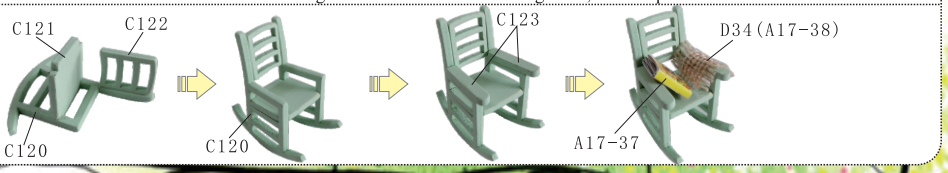

Sofa



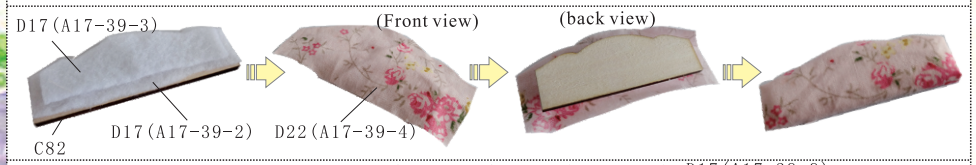

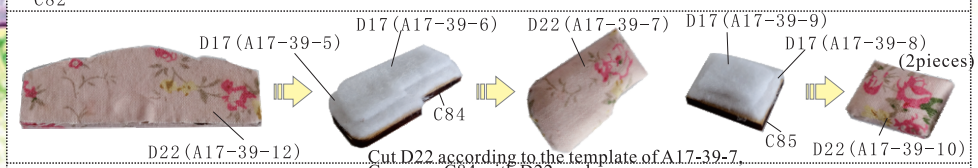



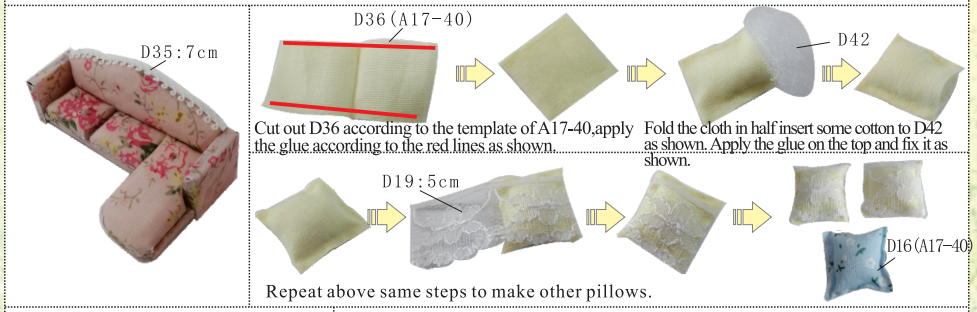

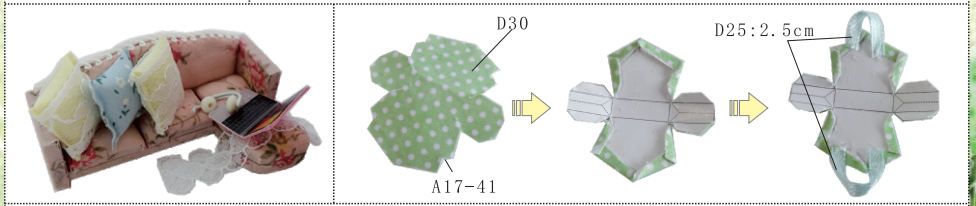

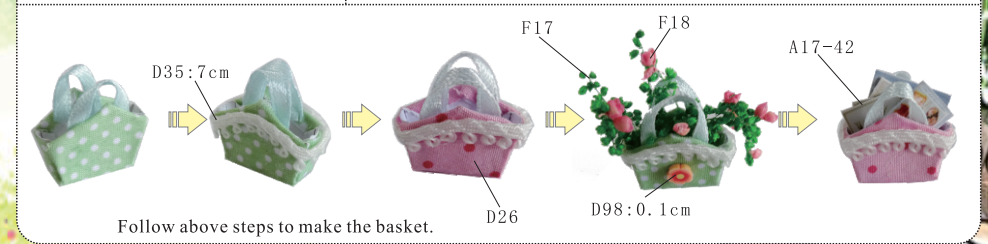

Piano

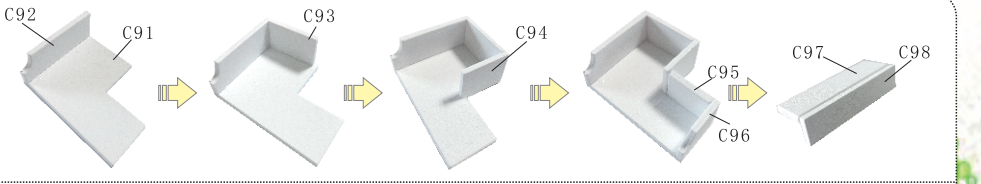

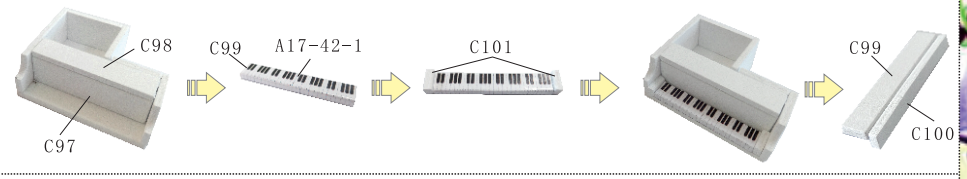

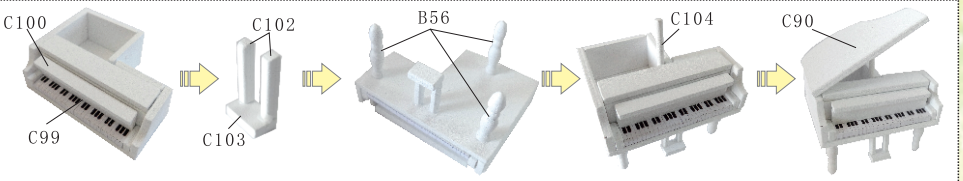

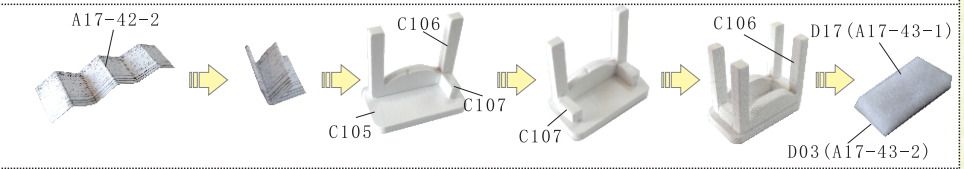

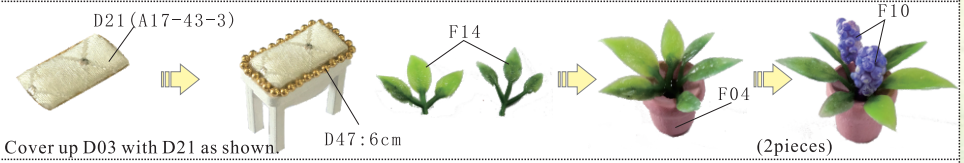

Cover up D03 with D21 as shown.

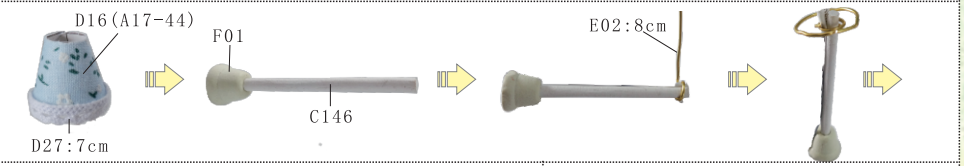



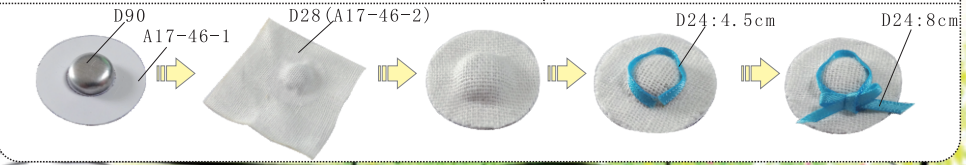

Bed

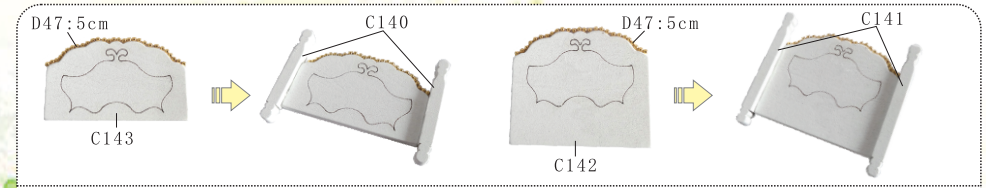

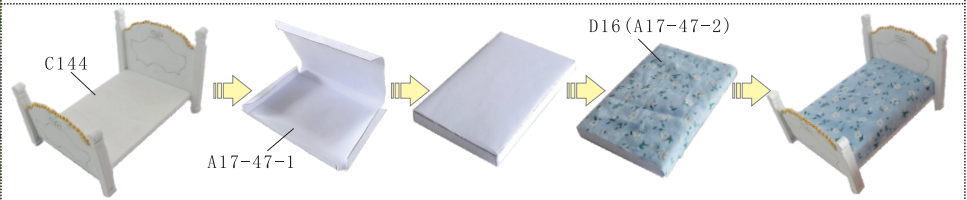



The making method of quit,please follow to pillow making method.



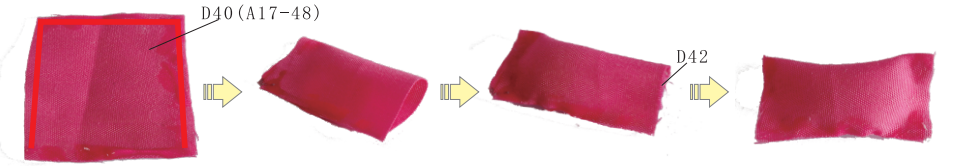

The making method of pillow, please follow to Page 5.



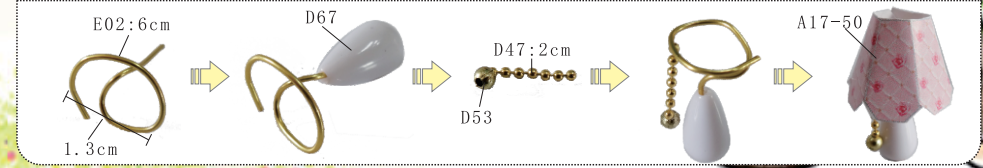

Bedside table

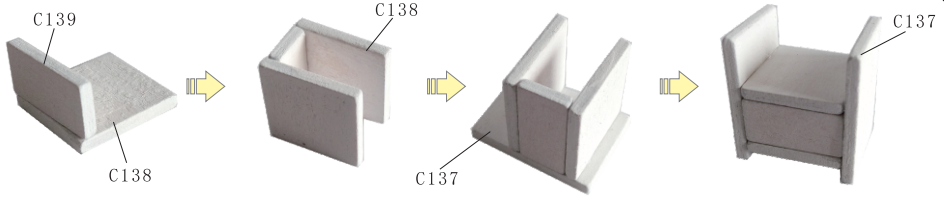

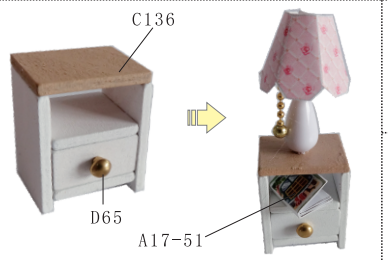

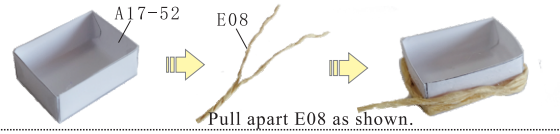

Pull apart E08 as shown.



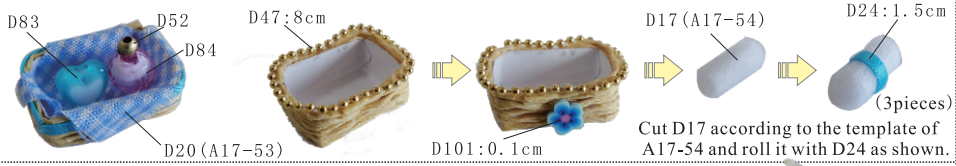

Cut D17 according to the template of A17-54 and roll it with D24 as shown.

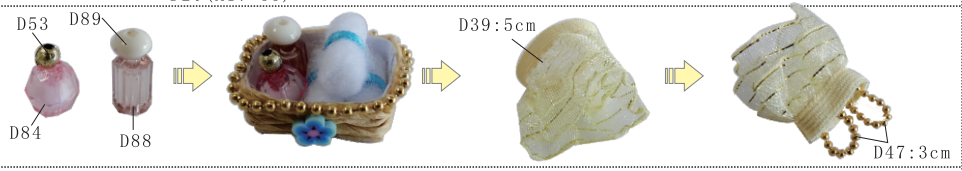

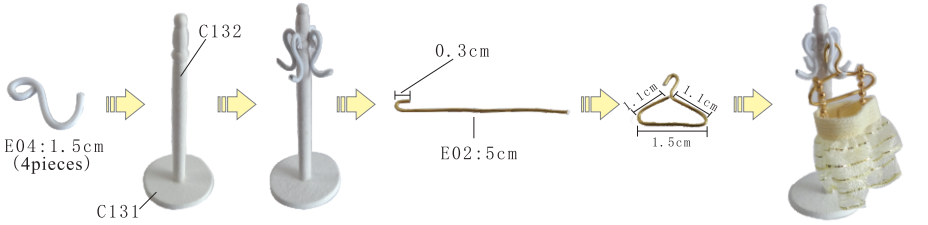

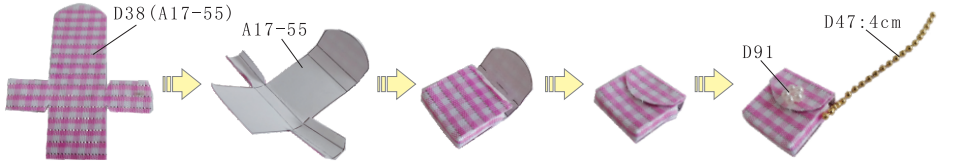



Repeat above same steps to make other hangbag.

Wall Shelve

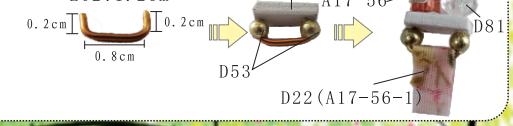

Shower

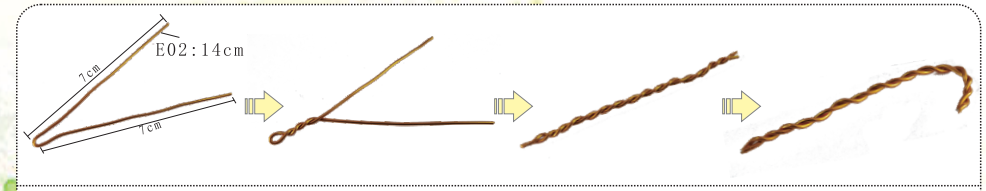



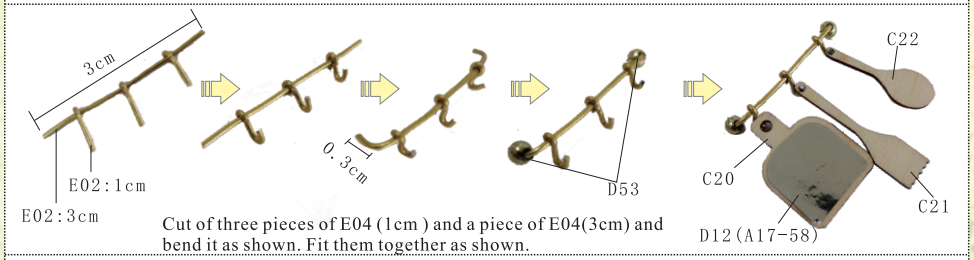

Cut of three pieces of E04 (1cm) and a piece of E04(3cm) and bend it as shown. Fit them together as shown.

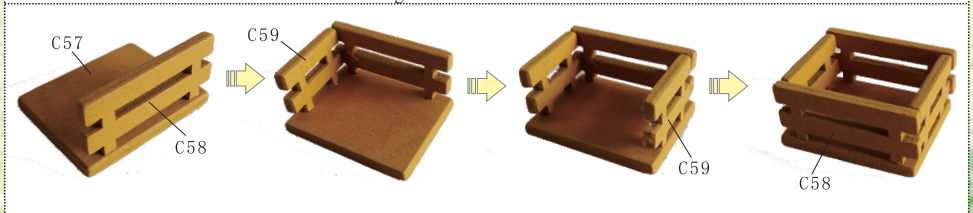

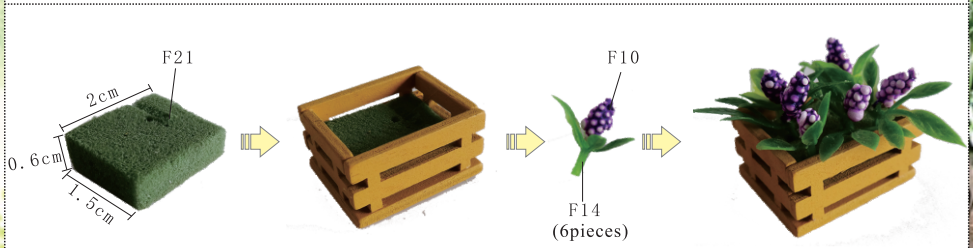

Flower shelve

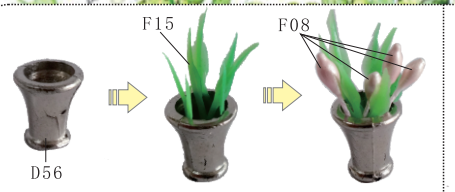

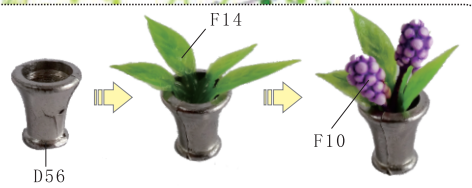

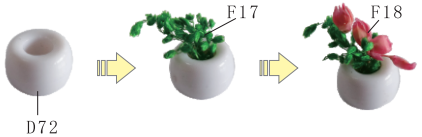

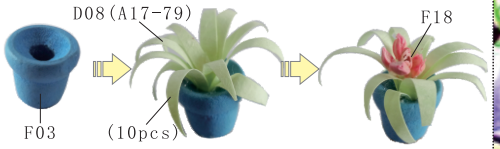

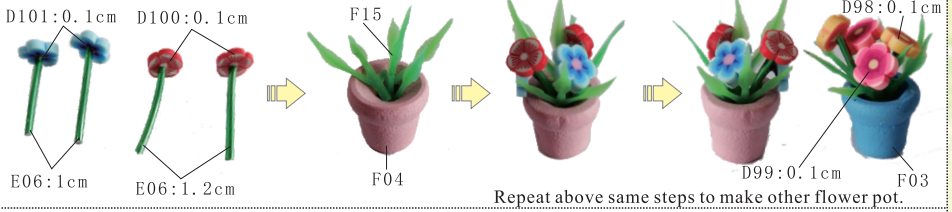

Repeat above same steps to make other flower pot.

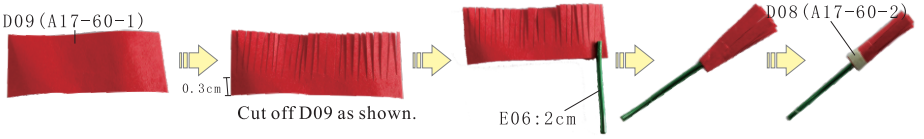

Cut off D09 as shown.

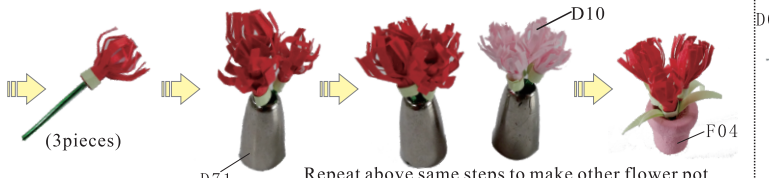

Repeat above same steps to make other flower pot.
(NOTE: the long of E06 is 1.2cm for small red flower)



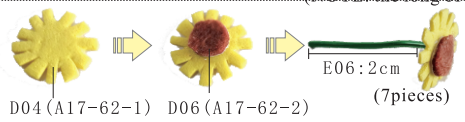

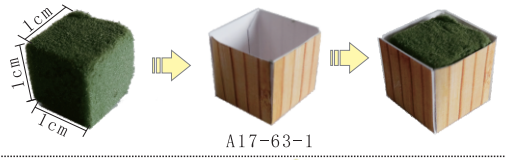



Repeat above same steps to make other flower pot.

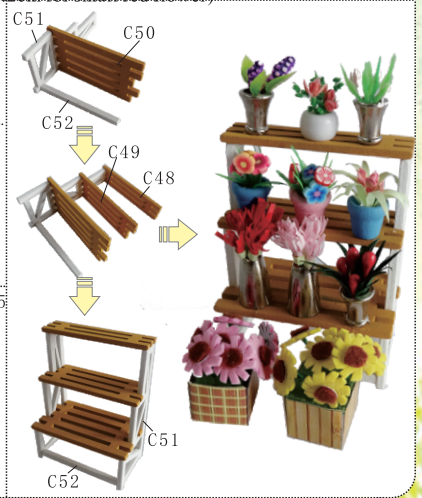

Flower shelve

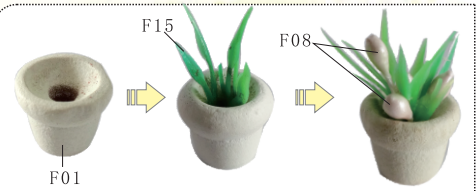

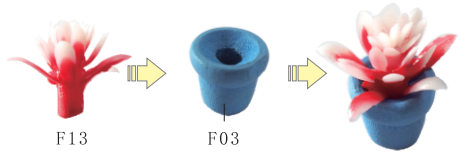

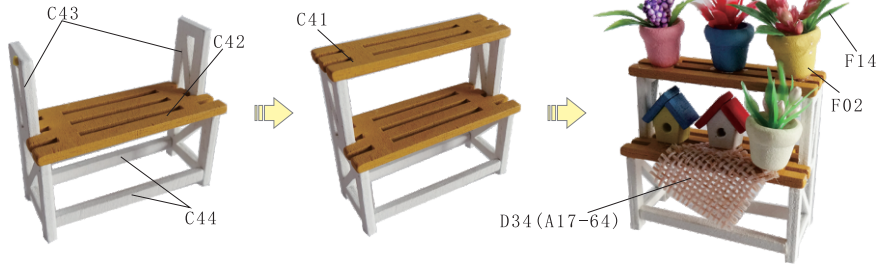

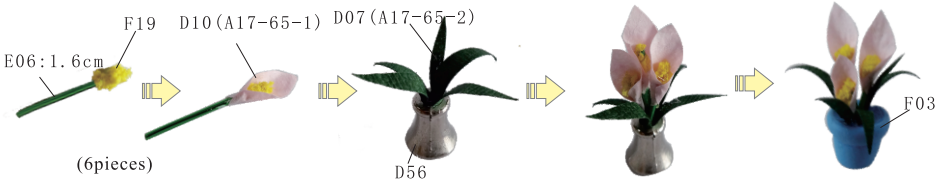

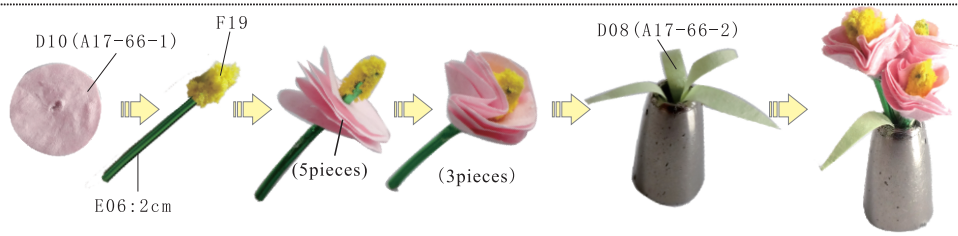

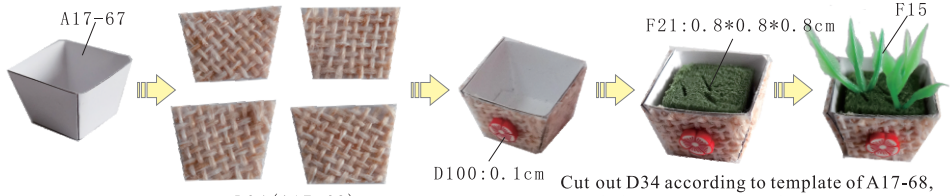

Cut out D34 according to template of A17-68, attach them on A17-67 as shown.

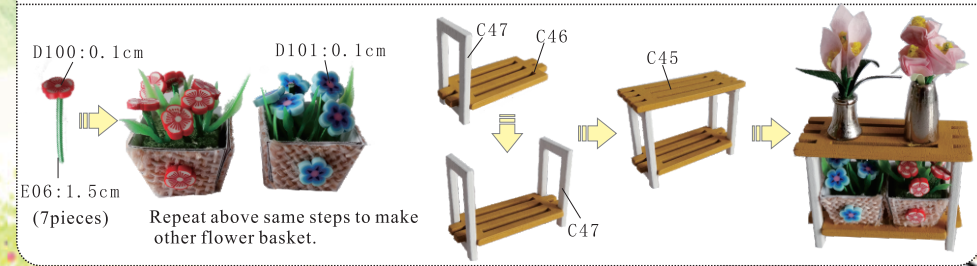

Repeat above same steps to make other flower basket.

Potted plant

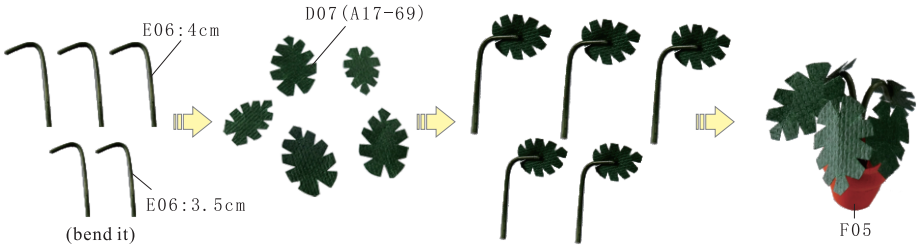

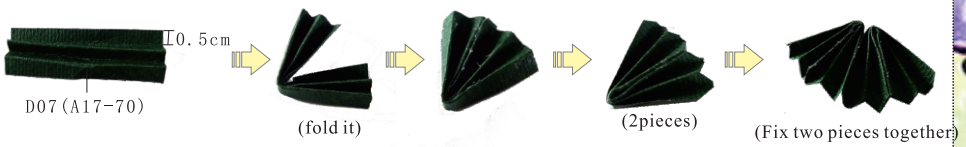

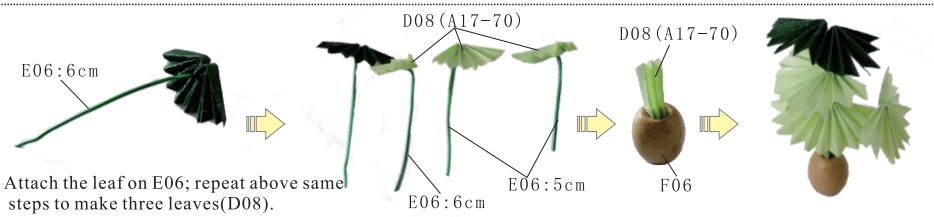

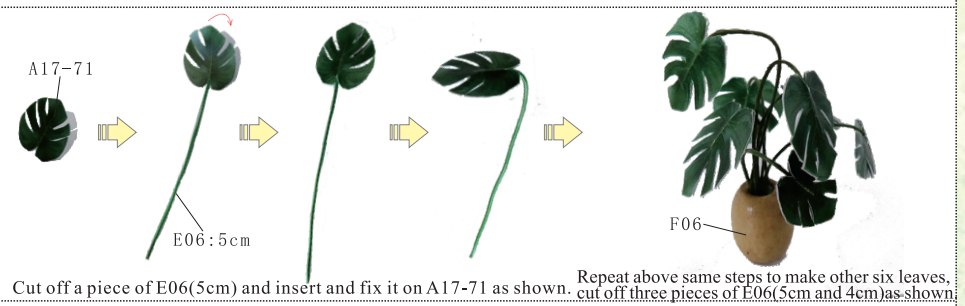

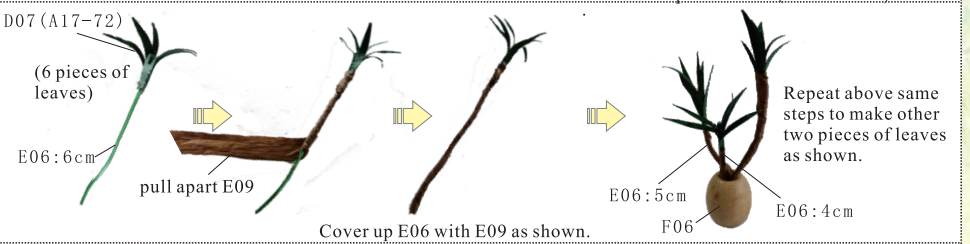

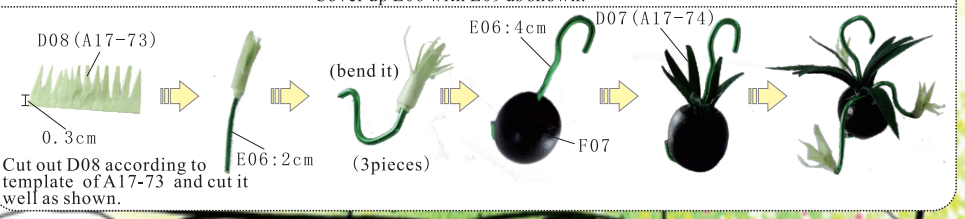

Bicycle

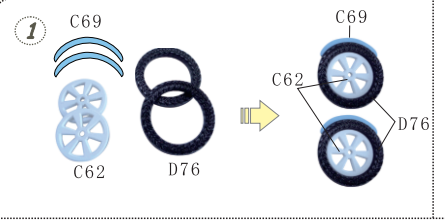

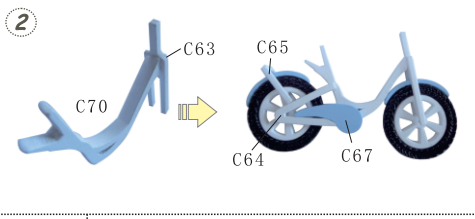

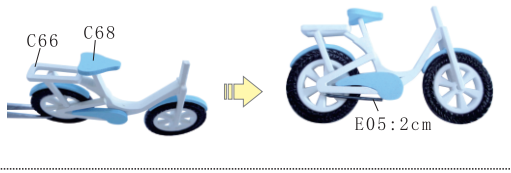

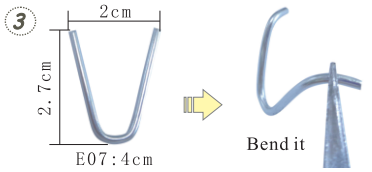

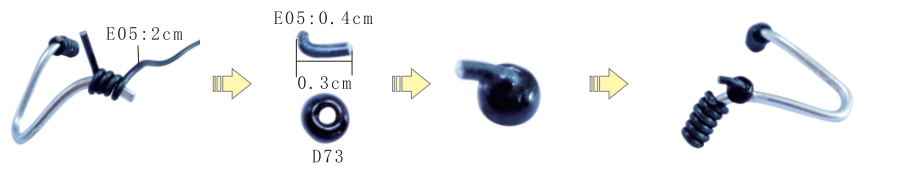

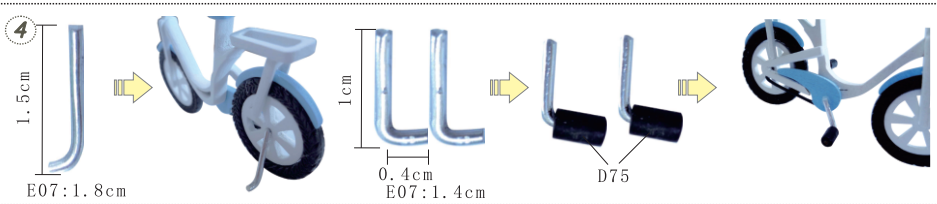

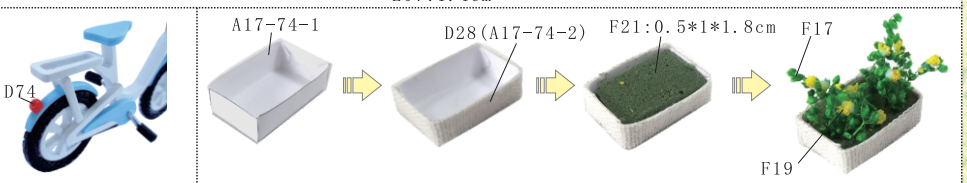

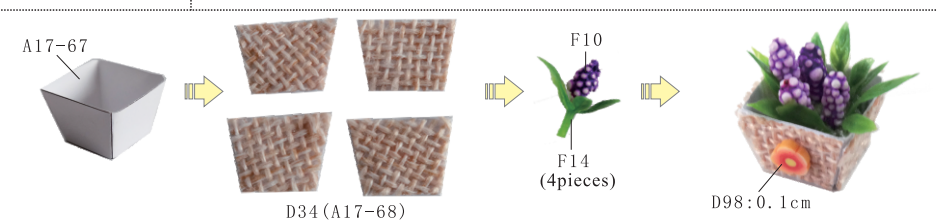

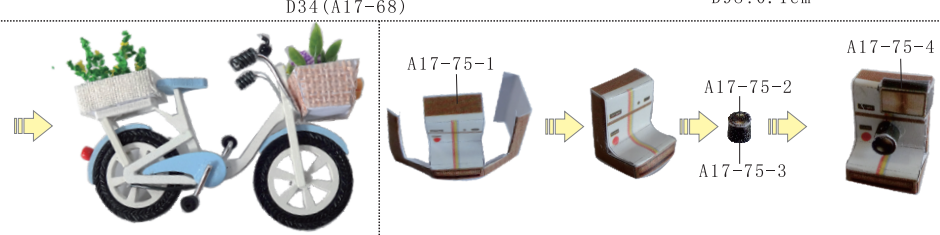

Flower groove



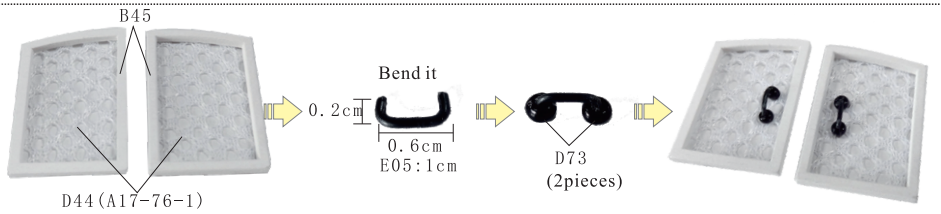

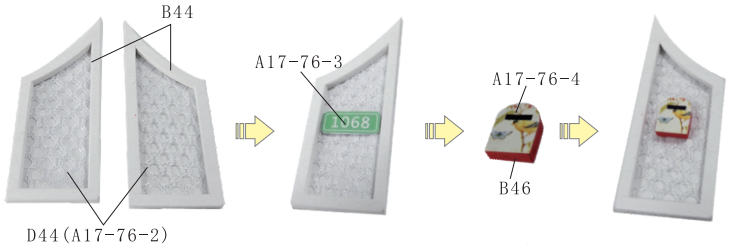

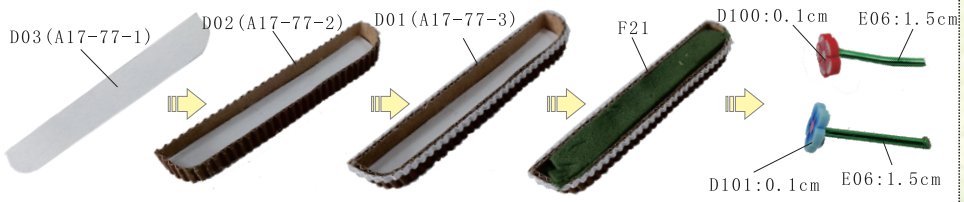

Cut off D03 according to A17-77, and attach D01 and D02 to D03 together as shown.

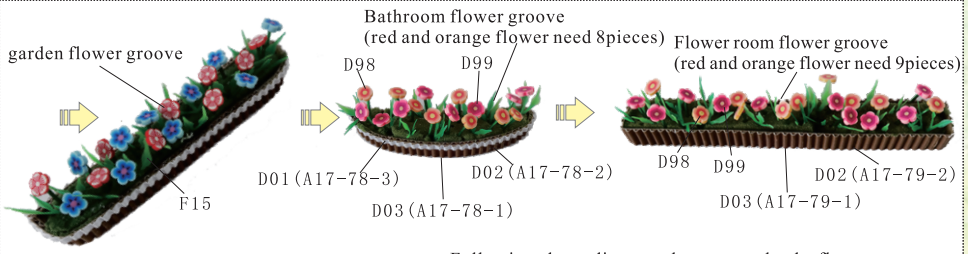

Following above diagram shown to make the flower groove.

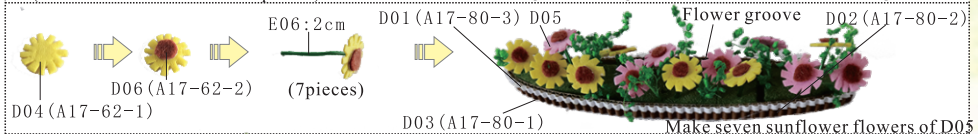

Make seven sunflower flowers of D05



Water pipe

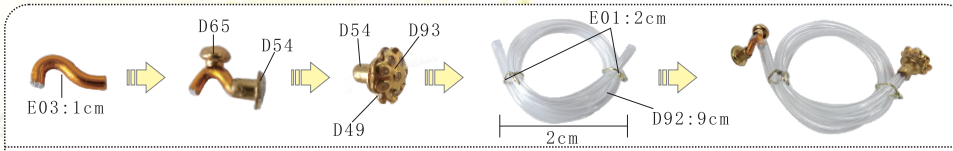

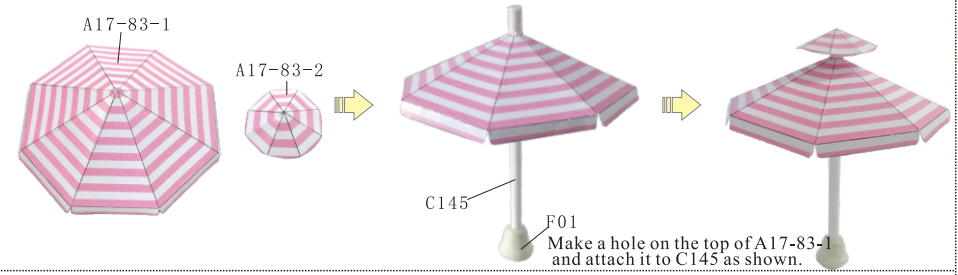

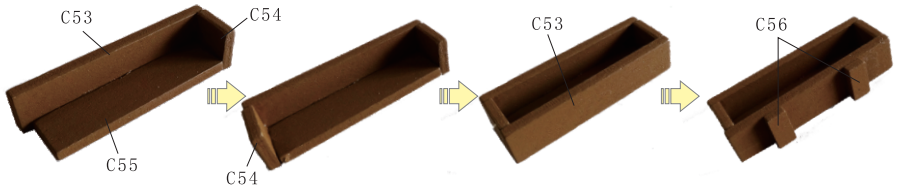

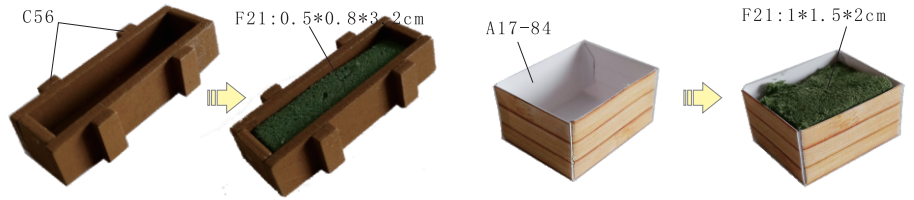



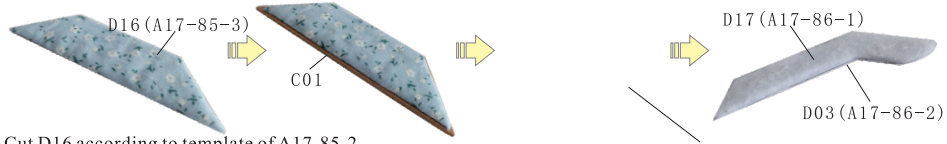

Cut D16 according to template of A17-85-2,
Cover up D03 and D17 with D16 as shown.

Tatami on the first floor

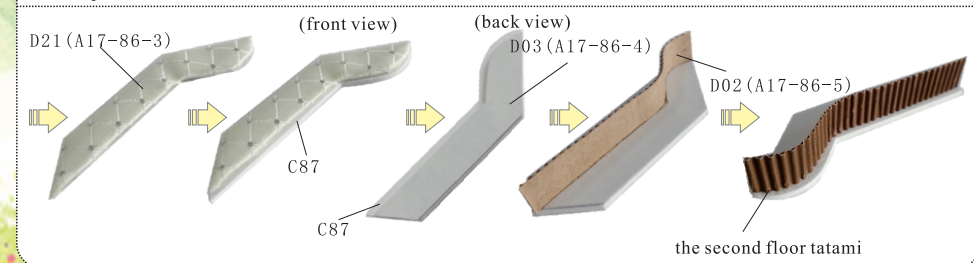

the second floor tatami

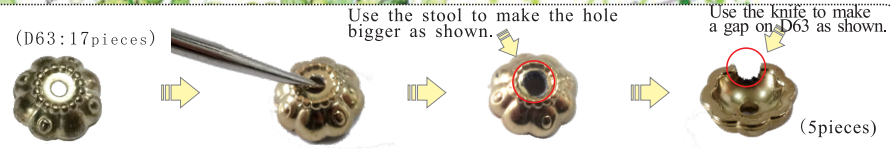

Take out 17pieces of D63, use the stool to make the hole bigger as shown, to ensure that the power wires and wire can pass through. Use the knife to make a gap on D63 (need 5pieces) as shown.

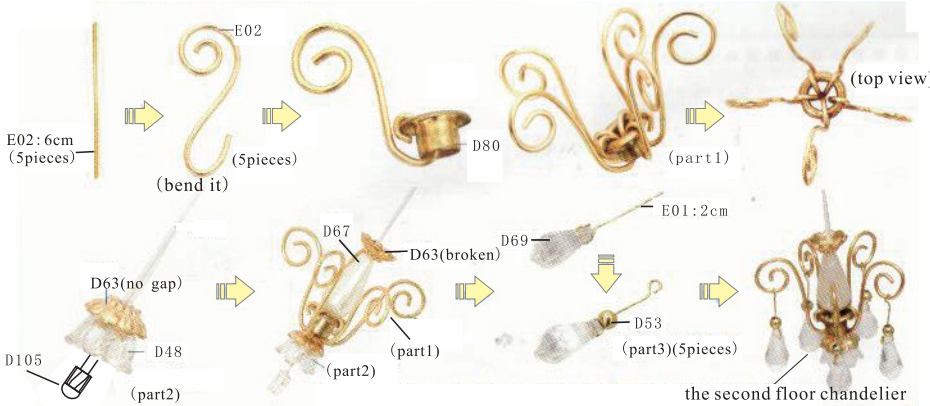

Follow the steps to make the chandelier on the second floor as shown.

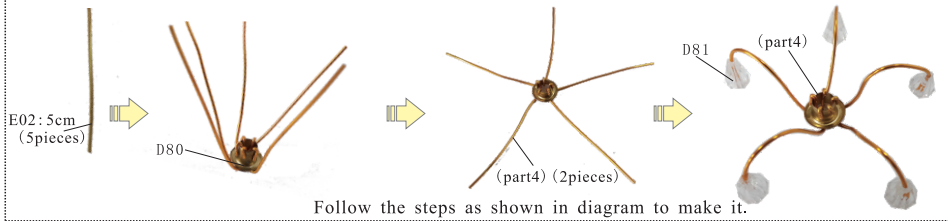

Follow the steps as shown in diagram to make it.

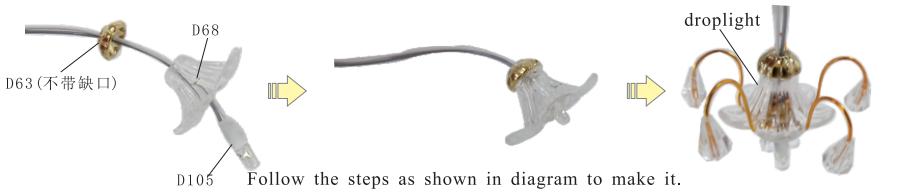

Follow the steps as shown in diagram to make it.

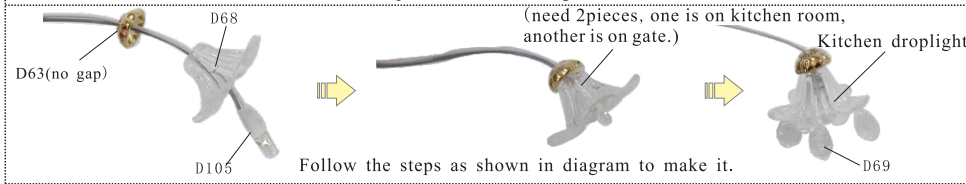

Follow the steps as shown in diagram to make it.

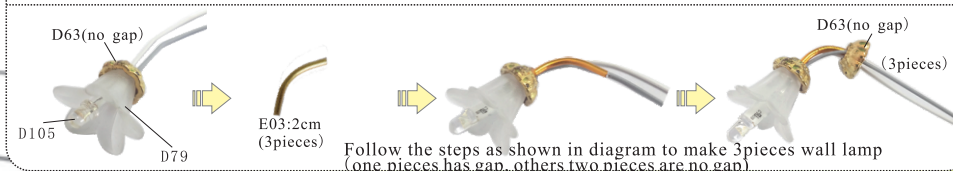

Follow the steps as shown in diagram to make 3pieces wall lamp
(one pieces has gap, others two pieces are no gap)

Lightings

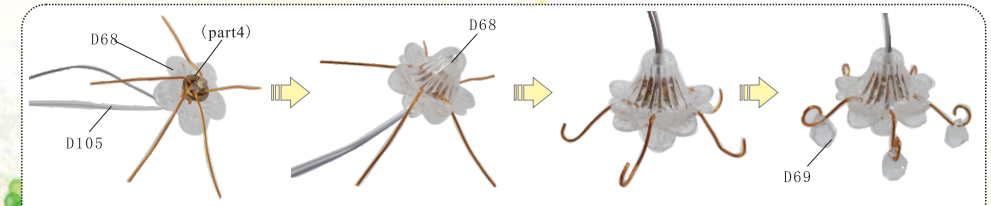

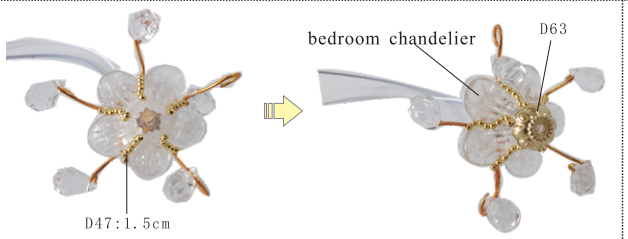

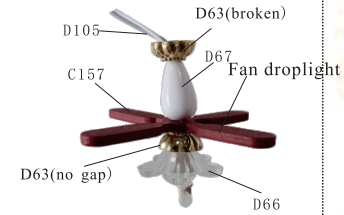

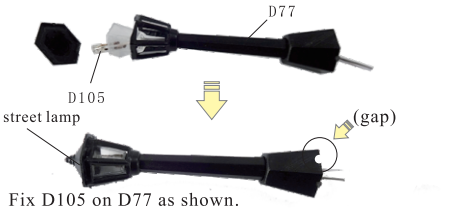

Fix D105 on D77 as shown.
Use the knife to make a gap on the bottom of D77 as shown.

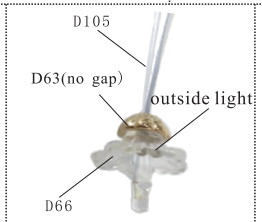

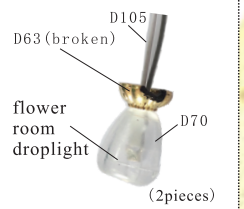

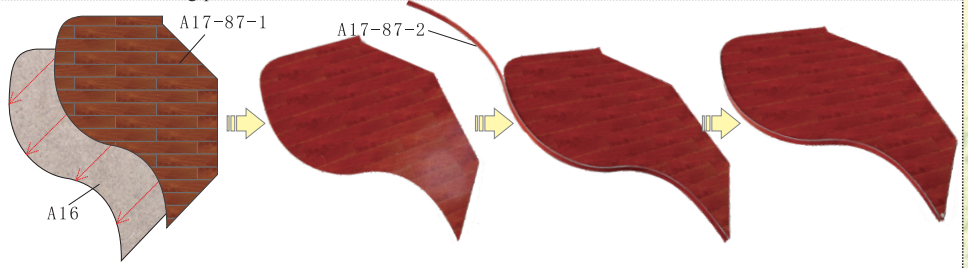

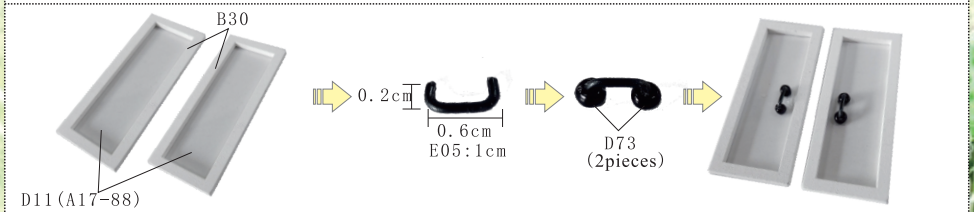

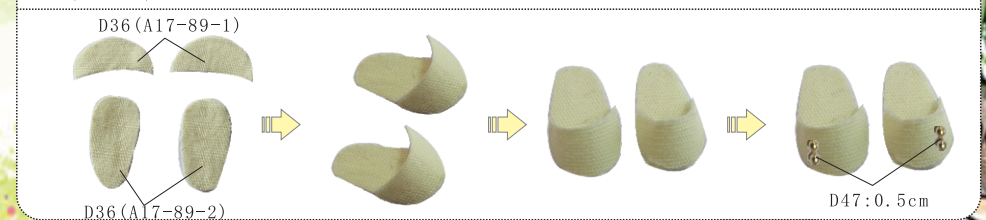

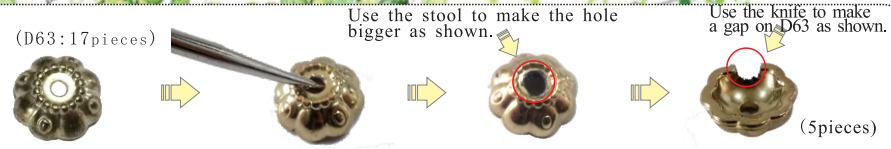

Take out 17pieces of D63, use the stool to make the hole bigger as shown, to ensure that the power wires and wire can pass through. Use the knife to make a gap on D63 (need 5pieces) as shown.



Follow the steps to make the chandelier on the second floor as shown.

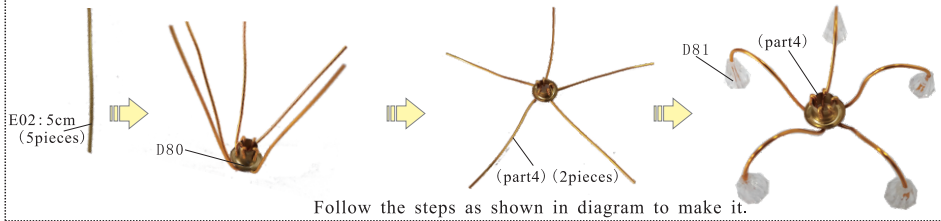

Follow the steps as shown in diagram to make it.

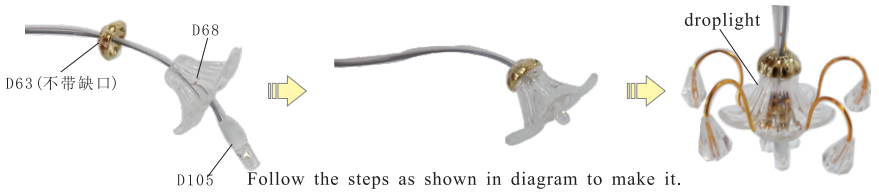

Follow the steps as shown in diagram to make it.

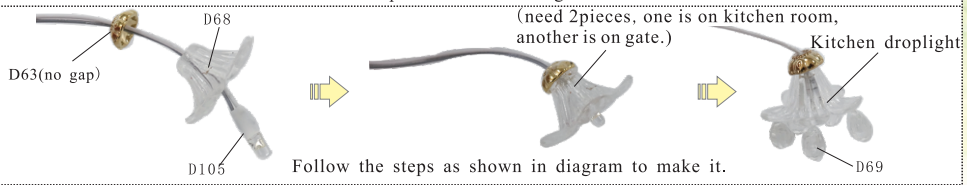

Follow the steps as shown in diagram to make it.



Follow the steps as shown in diagram to make 3pieces wall lamp
(one pieces has gap, others two pieces are no gap)

Lightings

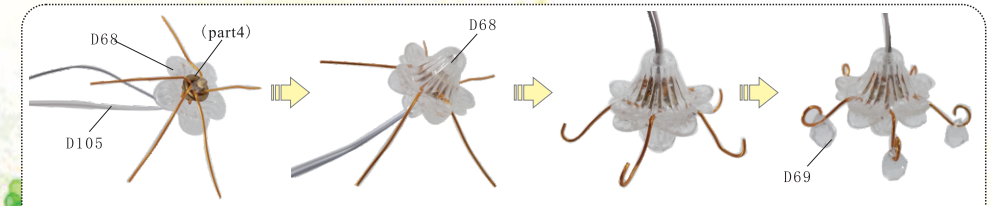

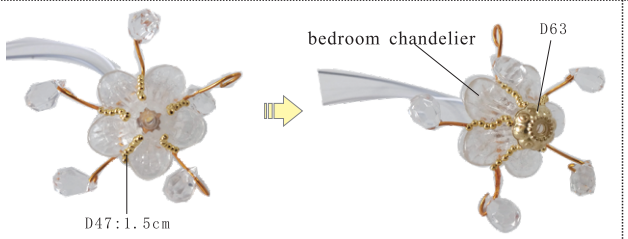

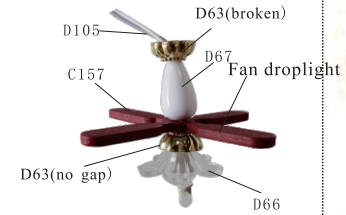

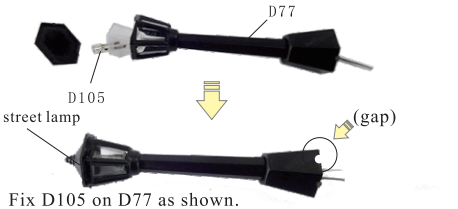

Fix D105 on D77 as shown.
Use the knife to make a gap on the bottom of D77 as shown.

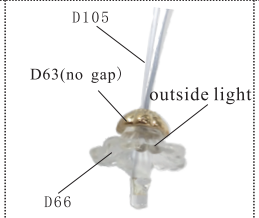

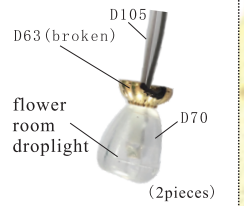

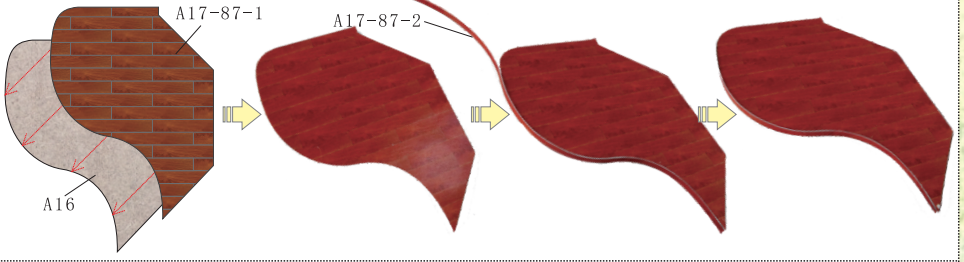

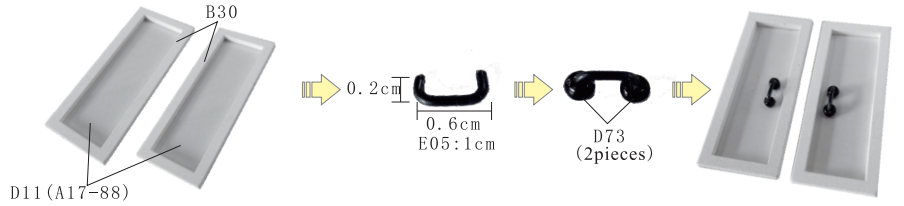

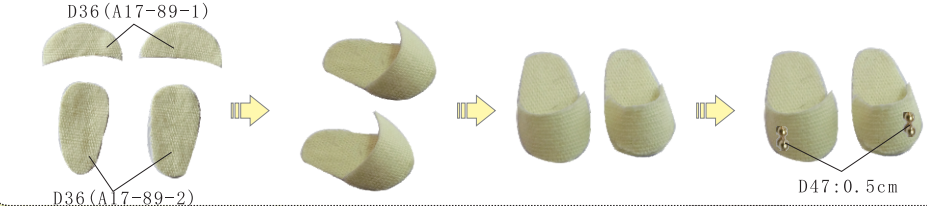

Outer frame

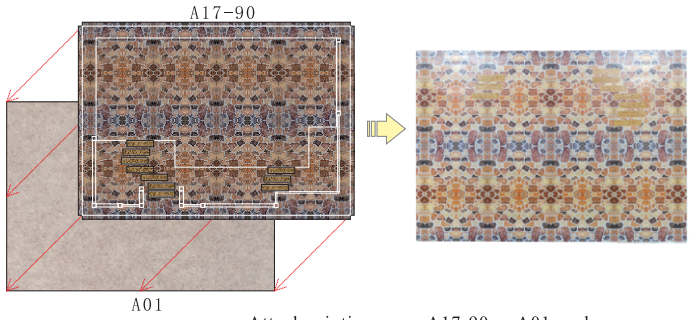

Attach printing paper A17-90 on A01 as shown.

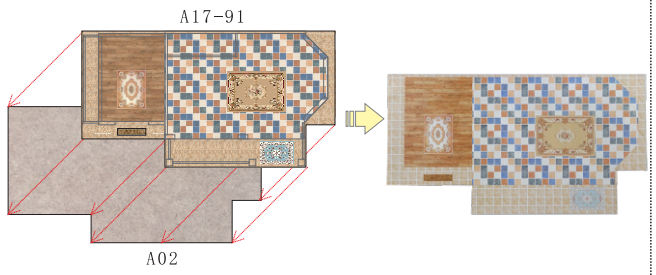

Attach printing paper A17-91 on A02 as shown.

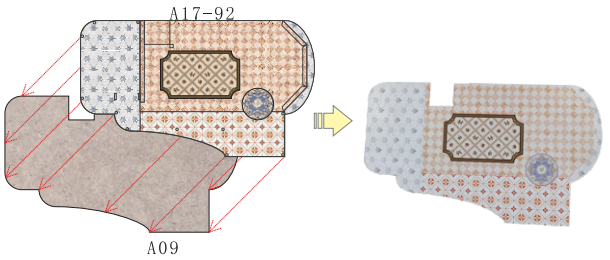

Attach printing paper A17-92 on A09as shown.
(please attach the printing paper on no color side)

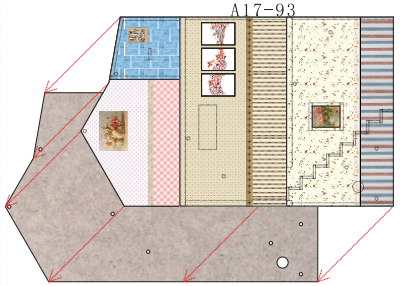



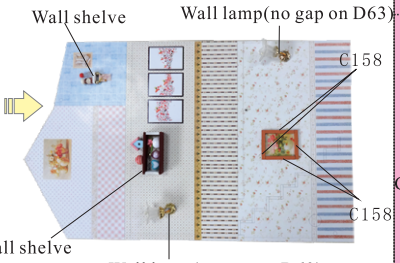

Music machine core manual guide
(If you have purchased the music machine core, please fix it firstly)



G01 Music machine core 1piece



G02 Music machine core handle 1piece



G03 Screw 3pieces

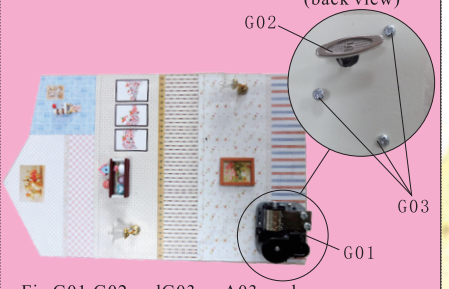

Fix G01,G02 andG03 on A03 as shown.

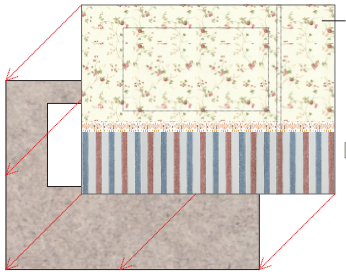

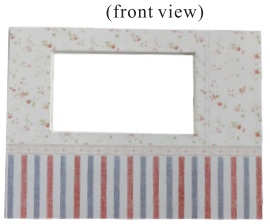

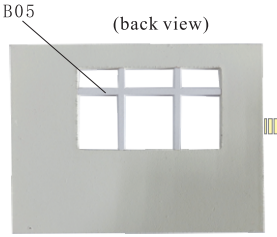

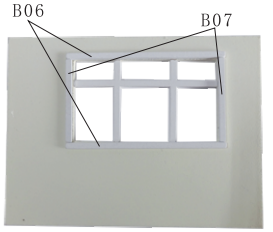

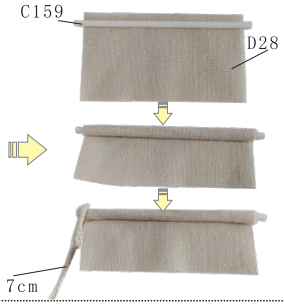



Attach A17-94 on A04, make the curtain well as shown.

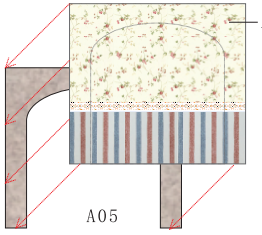



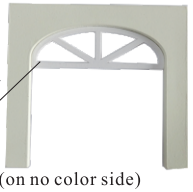

Attach A17-96 on A05 as shown.(on no color side)

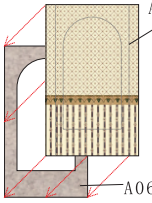





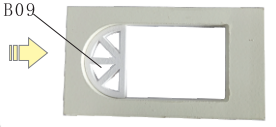



Attach A17-98 on A06 as shown.



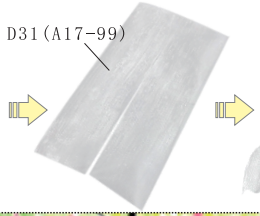

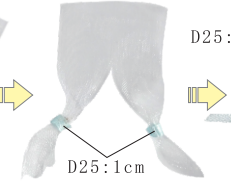

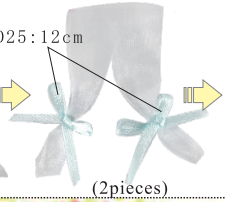





Outer frame

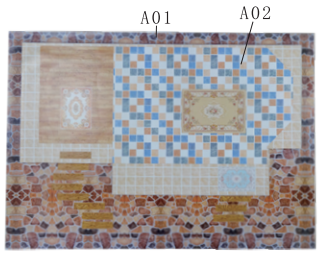

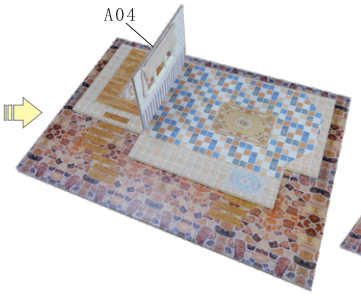

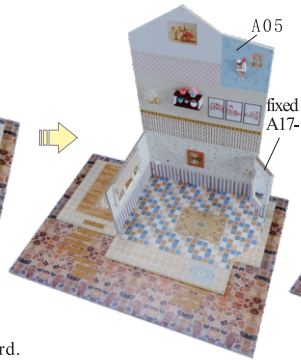

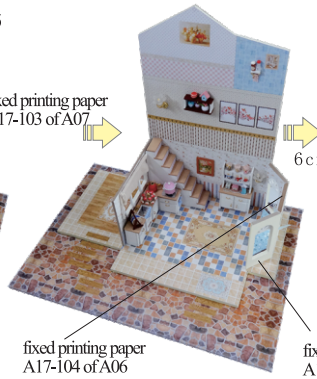

Follow the steps as shown in diagram to attach the wooden board.
(please note the paste method for A06 and A07 as shown.)



Attach he kitchen utensils
on the wall as shown.



Attach the first floor tatami and dining table well as shown.









Attach the combinations as shown.

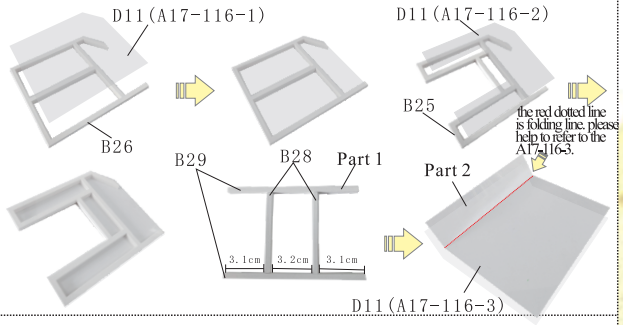







Attach combinations as shown.







Fix the hanging plant on
B27 as shown.



Attach B27 on the middle of part 1 as shown.



Attach part 2 as shown.



Attach the door as shown.

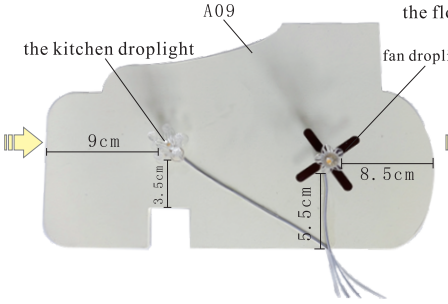

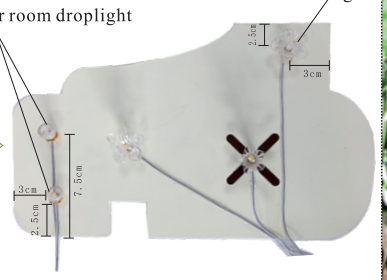

Attach the lights on A09 as shown.

Outer frame

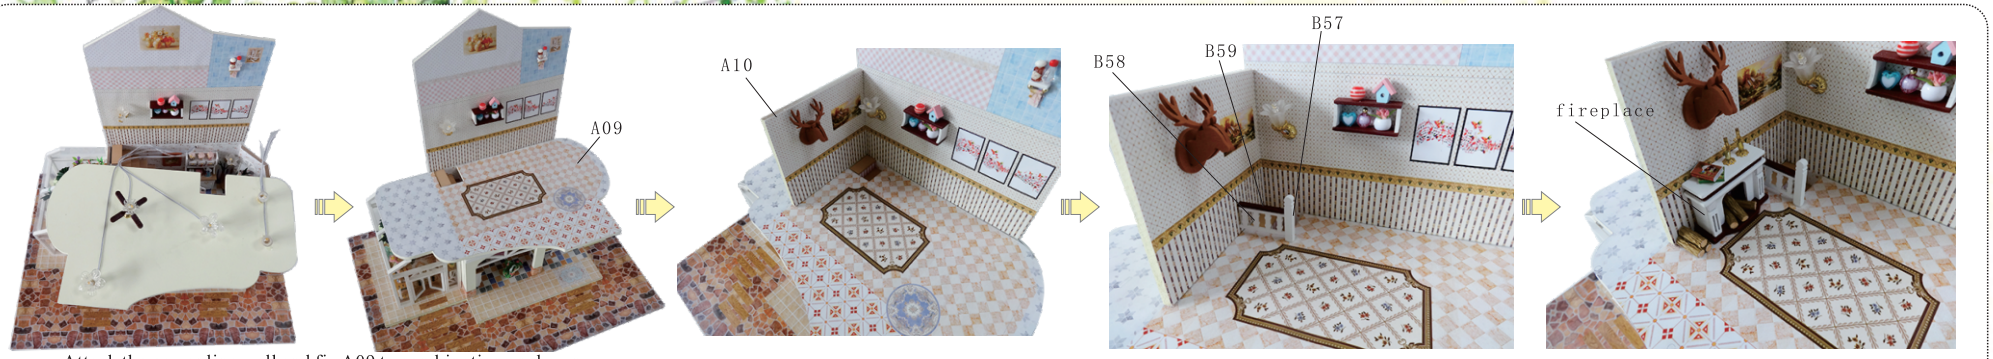

Attach the power line well and fix A09 to combination as shown.



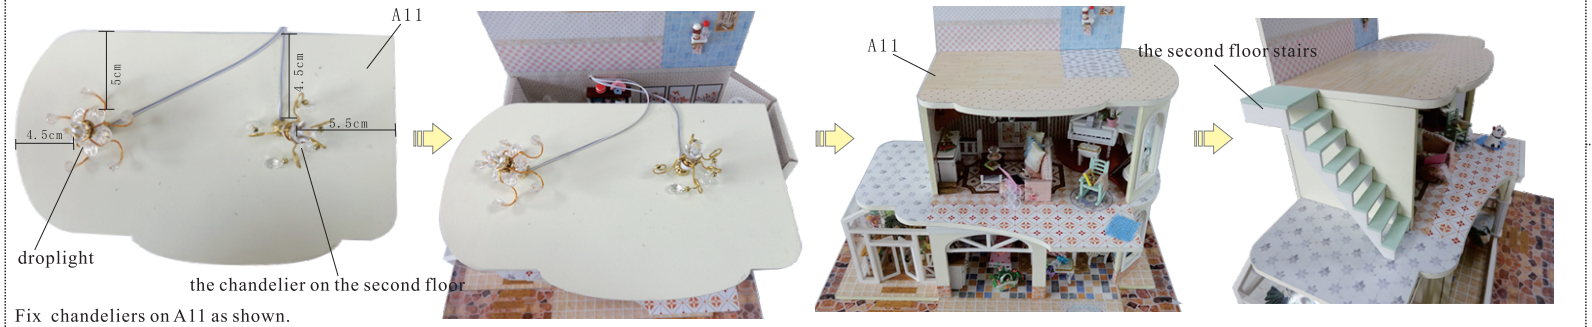

Fix chandeliers on A11 as shown.

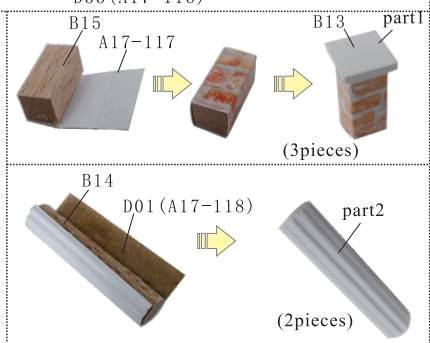

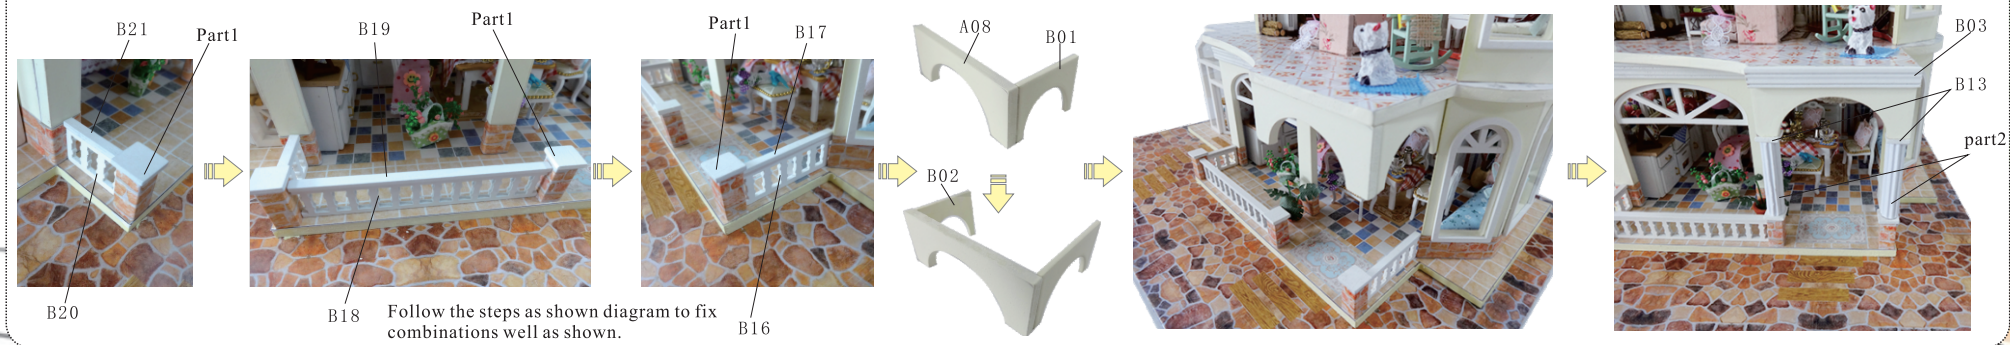

Follow the steps as shown diagram to fix combinations well as shown.

Outer frame

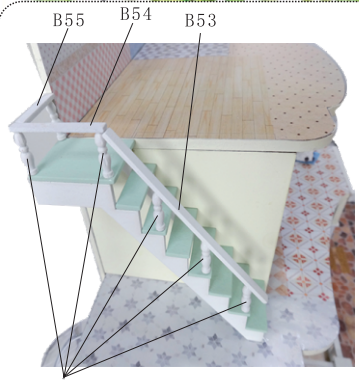

Attach the stair handrail as shown.

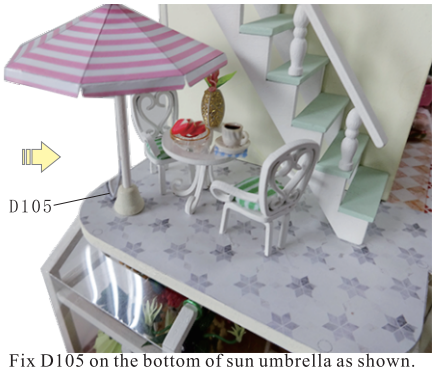

Fix D105 on the bottom of sun umbrella as shown.

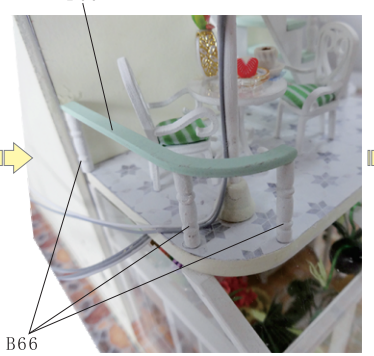

Attach B66 and B65 as shown.

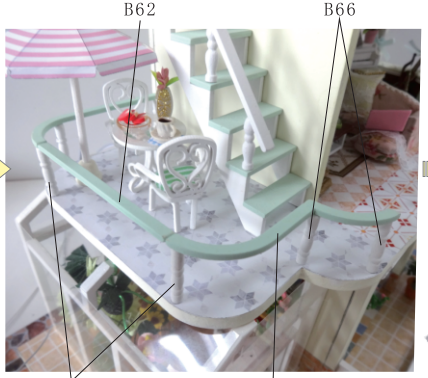


Floor groove







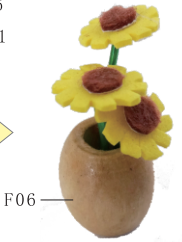

The making method of sunflower please refer to page 8, the length of E06 is 2cm,2.5cm,3cm.


The making method of flower pot please refer to page 8.



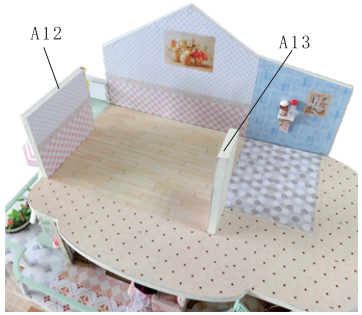

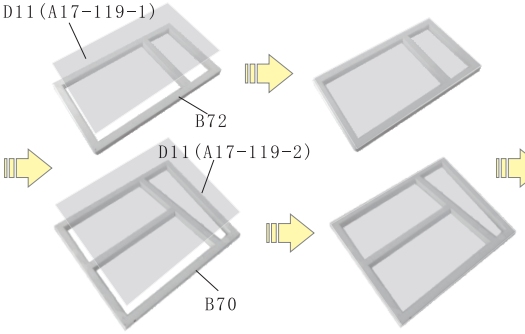

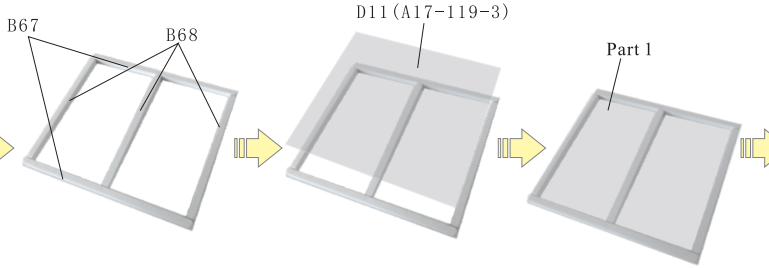



Cut out D11 according to the template and fix it to combination as shown.





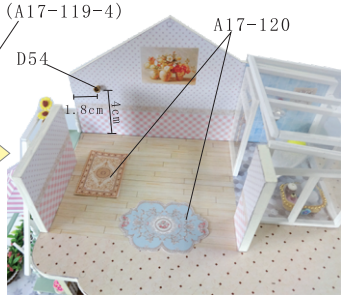





Outer frame











Follow the steps as shown in diagram to make the shed roof.























Attach A17-121 on D03 and then cut out ,fix it on the board as shown.

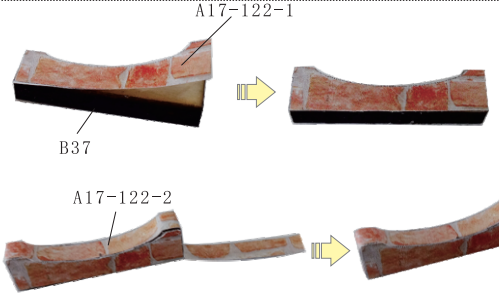

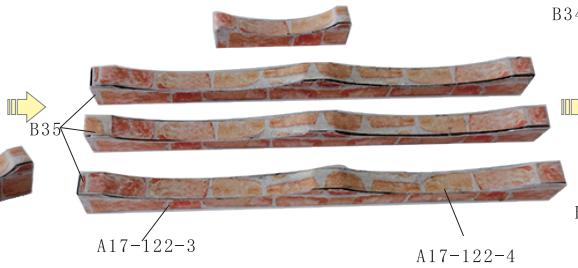

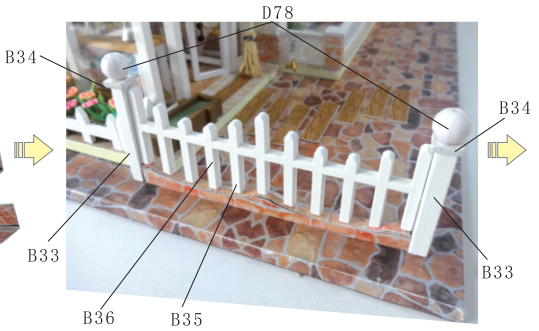

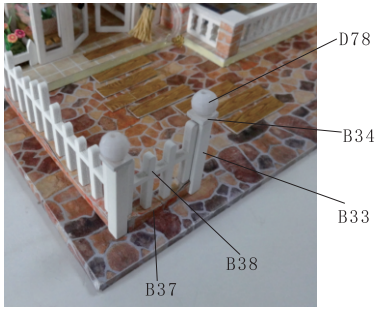

Outer frame



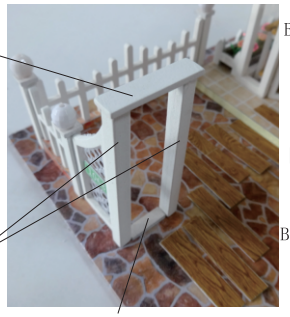







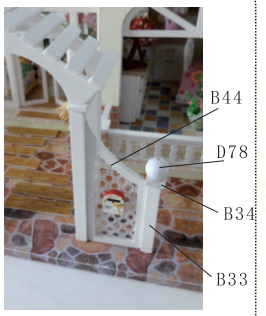









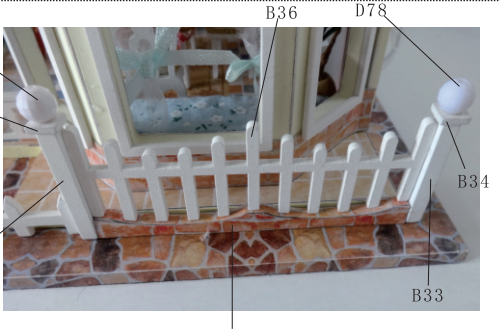





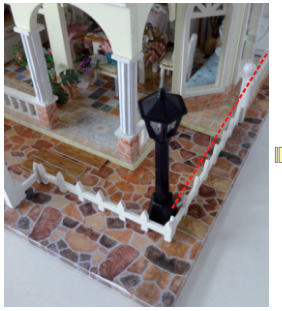







Fix power wires along the dotted lines as shown in the diagram.



The making method of sunflower please refer to page 8.











Attach F17 on the flower groove and railing as shown.

Outer frame



Attach some F19 on F17 as shown.

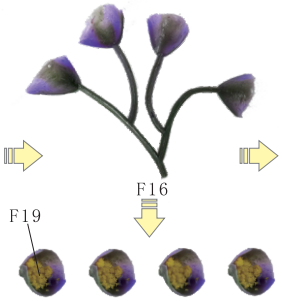



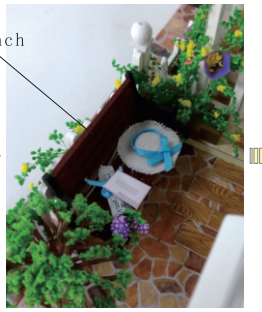

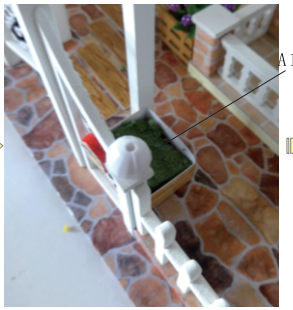



Cut out F16 and insert some F19 into F16, attach them t oF17 as shown.







How to connect to battery box

Statement: the lamp wires cannot be inserted into the output socket.



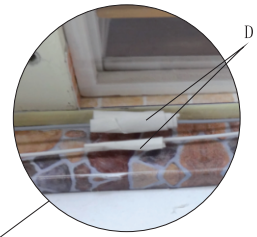

For LED wiring extension, please refer to the making method on page 1.

——Can use 5 batteries
——Please notice the place of anode and cathode when pit in the batteries
——Rechargeable batteries are not blunt electricity
——Rechargeable batteries can only be charged under adult supervision
——Rechargeable batteries should be removed from the toy before charging
——Different types of batteries cannot mix; Do not mix new batteries in use with semi-used batteries.
——Run out of battery should be removed from the toy
——The power shall not be short circuit

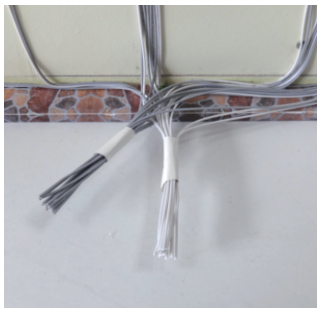

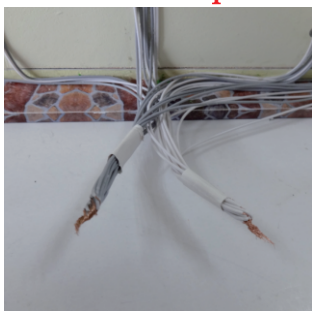

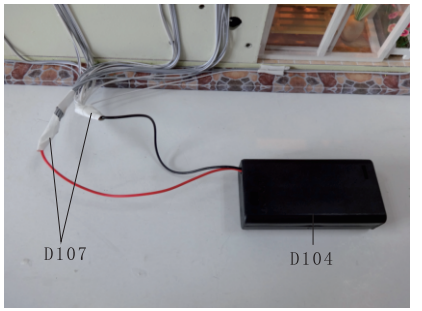

1.Trim all the LED wiring to the same length.
2.Use a craft blade to carefully skim over the plastic to bare the copper wire. Twist the same colour wire together.

3. Twist the following wire together:
(I) BLACK wire from the battery box with the WHITE wire from LED bulb.
(II) RED wire from the battery box with the GREY wire from LED bulb.

4. Roll and seal the duly twist copper with the white tape provided.
Place the battery box in the allocated space.

Installation of dust proof cover
(For updated version, the parts need to be purchased separately)

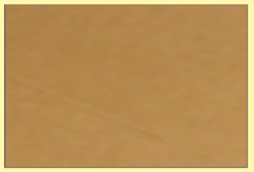

G04 Transparent cover
0.15*24*34 (1piece)



G05 Transparent cover
0.15*31*34 (2pieces)



G06 Transparent cover
0.3*23.7*31 (2pieces)



1. Tear off kraft paper of each piece of transparent cover.

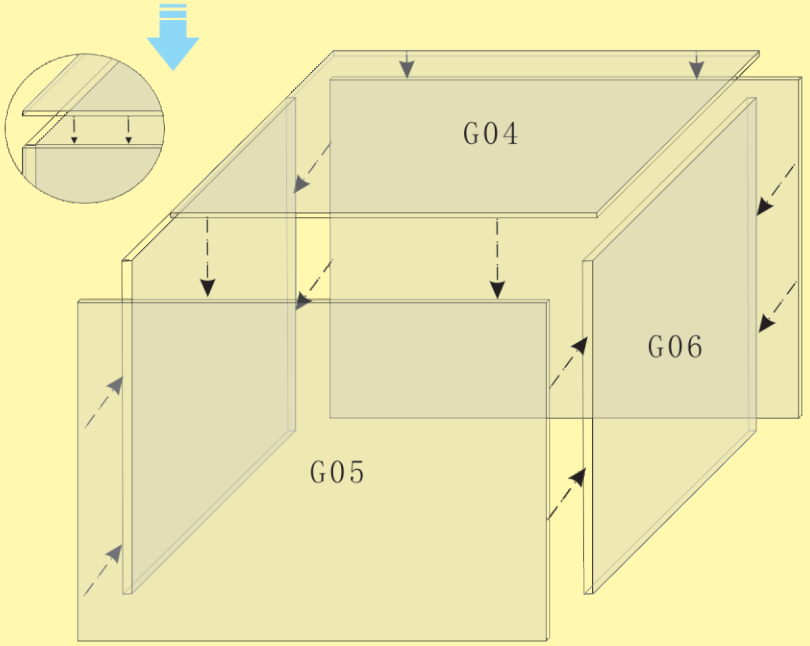

2.Paste G04,G05,and G06 together to complete the dust proof cover as shown.

Photo of Dust proof cover





Photo Gallery










Photo Gallery















Attention: Please keep the instruction for future enquires after installation.